


TO REPLACE BATTERIES

1



2

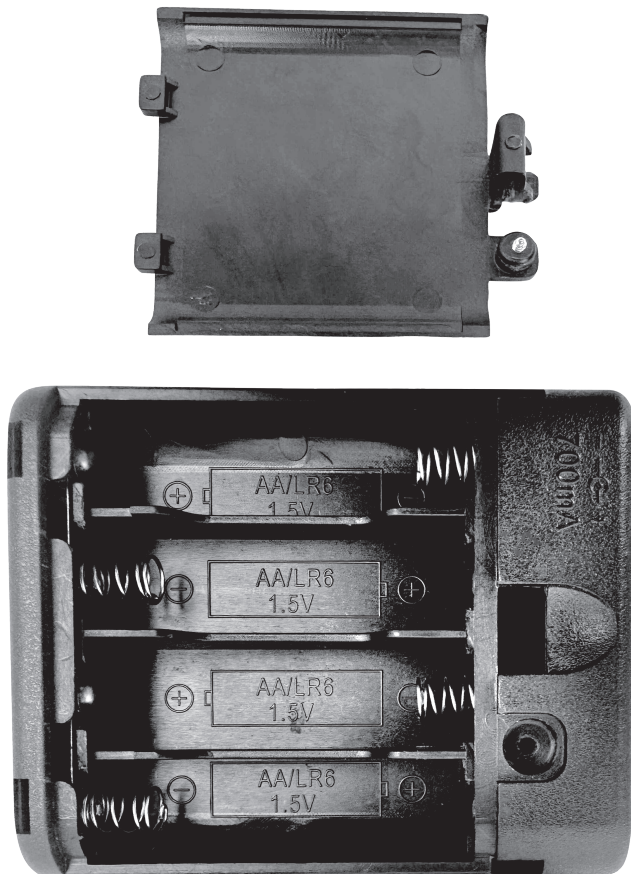

Requires 4 "AA" 1.5V batteries (sold separately). Battery removal and replacement must be done by adult only.

·Do NOT use rechargeable (nickel-cadmium) batteries.

Do NOT recharge NON-rechargeable batteries.

Do NOT mix old batteries with new or different types of batteries.

Do NOT mix alkaline standard (carbon-zinc) batteries or rechargeable (nickel-cadmium) batteries

Do NOT place batteries near open flame or heat. Remove batteries from product before storing for an extended period of time.

Only batteries of the same or equivalent type as recommended are to be used. Batteries are to be inserted with the correct polarity. Exhausted batteries are to be removed from the costume. The supply terminals are not to be short circuited.

DISPOSAL - This product contains batteries and electronics that may be harmful to the environment; they should not be discarded with normal household waste but taken to your local collection center for recycling

·Please retain this information for future reference.

To install the Fan and the Battery-Pack


1.

BEFORE WEARING COSTUME:
On fan mechanism, unscrew outer fan ring counterclockwise.




2.

Locate round opening on outside of costume.

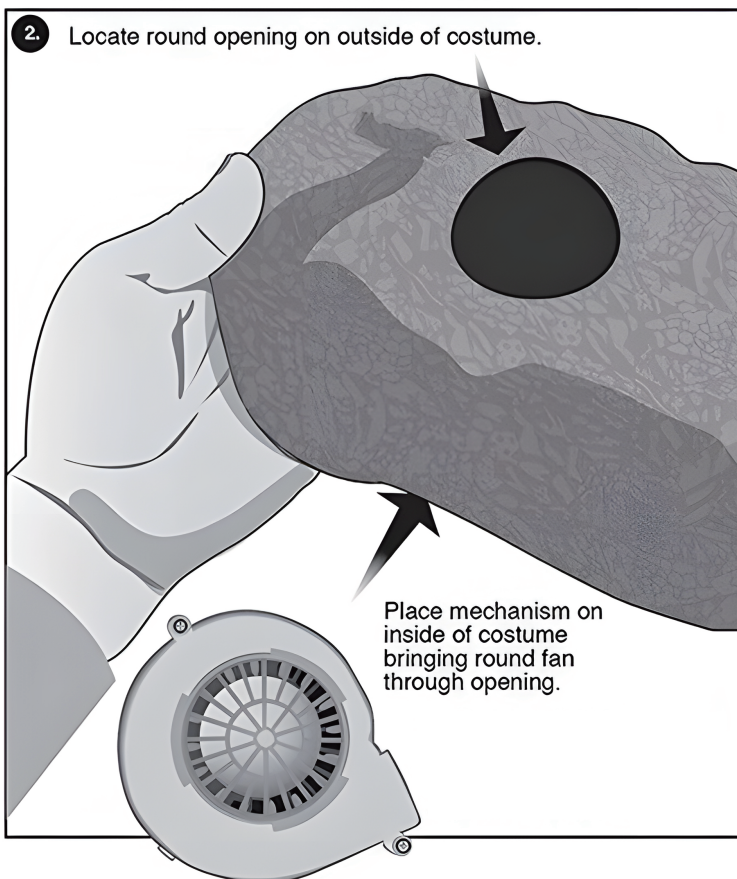


3.

Screw outer fan ring back into place to secure fan to costume.

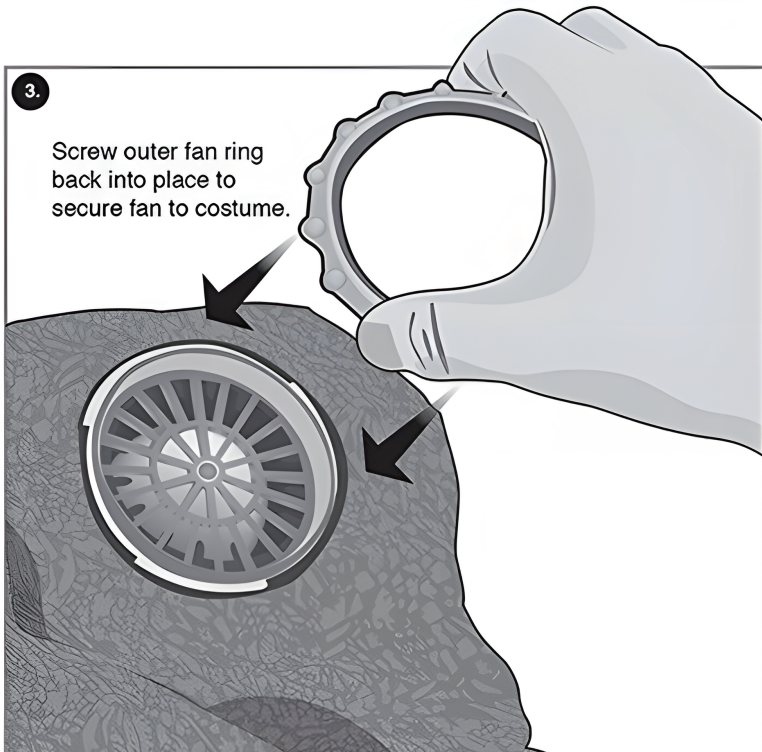

Finished look.

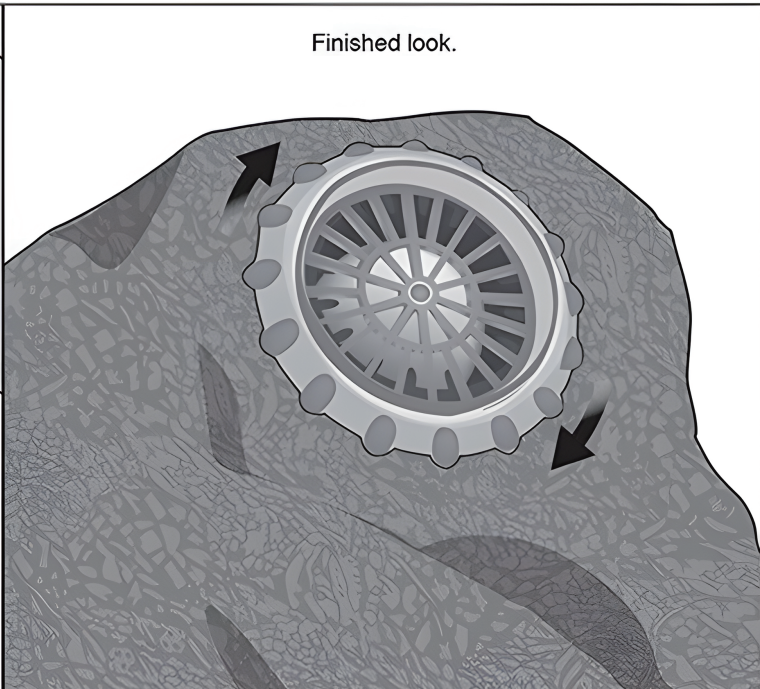

4. Move battery-pack switch to ON position. Step into costume. Clip battery-pack to your own clothing inside.

5. Secure all openings so air does not escape from costume. After taking off costume, switch battery-pack to OFF position and remove batteries.