

PARTS LIST:

ASSEMBLY INSTRUCTIONS FOR FUN5943 CANDY CAIN ANIMATRONIC
THIS IS NOT A TOY. 14+ AGE. PLEASE FOLLOW DIRECTIONS FOR EASY SET-UP.




ONCE ASSEMBLED AND PLUGGED-IN, CANDY CAIN WILL HAVE LIGHT-UP EYES, MOVING MOUTH, MOVING CANE ARMS AND AUDIO. ITEM WORKS WITH OR WITHOUT STEP-PAD. WHEN POWER SWITCH IS SET TO ON, CAIN IS ACTIVATED BY SOUND SENSOR. TO ACTIVATE BY STEP-PAD, SET POWER SWITCH TO OFF. KNOB ON SPEAKER ADJUSTS VOLUME.

CANDY CAIN ANIMATRONIC WILL BE BUILT FROM THE FLOOR UP.

STEP 1

- Lay Base on floor, pegs in back.
- Place Shoes over pegs on Base.
- Connect Bottom Leg Poles to pegs on Base through Shoes.
- Connect Top Leg Poles to Bottom Leg Poles.

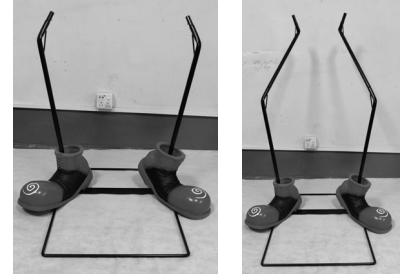

STEP 2

- Add Pants over legs
- Connect Waist Ring to bottom of Chest/Speaker
- Connect Chest/Speaker to top of legs, speaker facing back.




STEP 3

- Lift Pants around Waist Ring.
- Attach Shoulder Frame to top of Chest/Speaker
- Drape Shirt over Shoulder Frame
- Connect Head to top of Shoulder Frame
- Connect wire from Head to Speaker.



STEP 4

- Inflate candy canes with mouth or pump by pinching nozzle and adding air.
- Insert Shoulder/Cane Connectors onto canes.
- Connect canes to Shoulder Frame

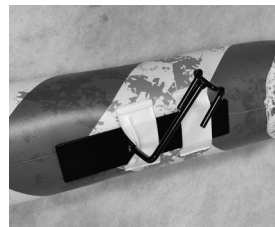

STEP 5

- Connect Step Pad to jack on left on Speaker.
- Connect Plug to jack on right on Speaker.
- Adjust volume with blue knob on Speaker.
- Close back of shirt
- Add Belt.
- Add collar.

