

EASY ASSEMBLY AND OPERATION INSTRUCTIONS

FUN94274 60" Ghostbusters Animated Slimer



Please follow the step by step guide and enjoy your Ghostbusters Animated Slimer!

Please read all instructions carefully before assembling. Save this instruction sheet for future reference.

CARE AND STORAGE INSTRUCTIONS

For indoor or covered porch use. When not in use, store this product in its original packing. Keep away from heat and moisture.

⚠ WARNING

This item is not a toy and should be used for decoration only. This item contains small parts that can be a choking hazard. Keep all plastic and wire parts away from children.


1. Please use the adapter supplied by manufacturer.
2. Please assemble item according to instructions. Connect all wires according to matching color.
3. Children should be supervised by adults. Item should not be grabbed, as it becomes a tipping hazard.
4. Keep all away from the adapter, as it heats up during operation.

PARTS LIST


- A. Base x 1
- B. Support Pole x 1
- C. Body x 1
- D. Left Arm x 1
- E. Right Arm x 1
- F. Cover x 1
- G. Assembly Screws x 1
- H. Adapter x 1

Input: 100V-240V AC 50/60Hz

Output: 5.9V 2.0A

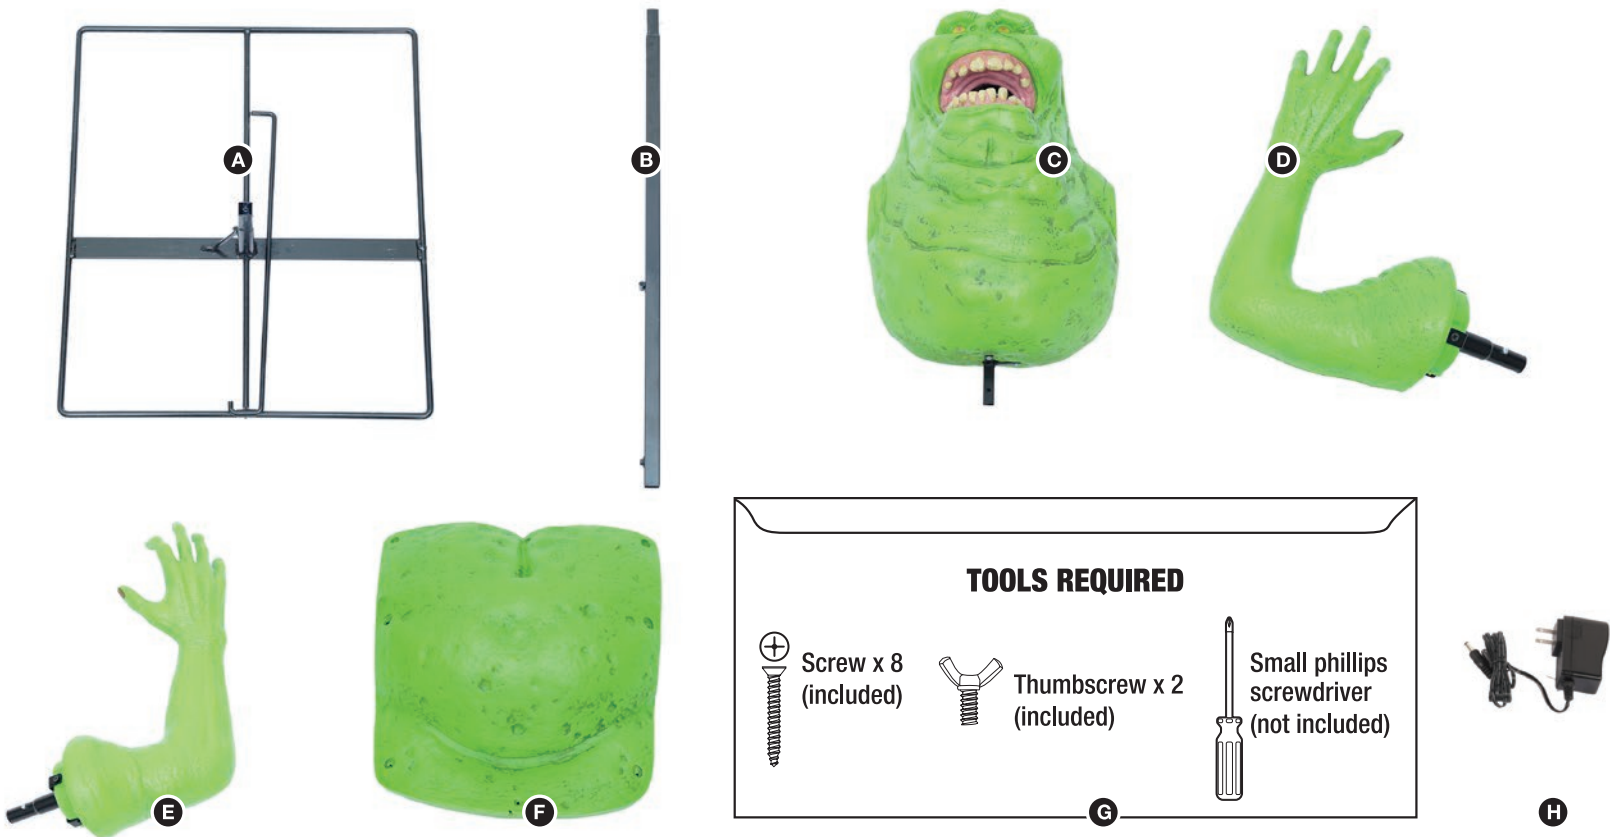


TOOLS REQUIRED

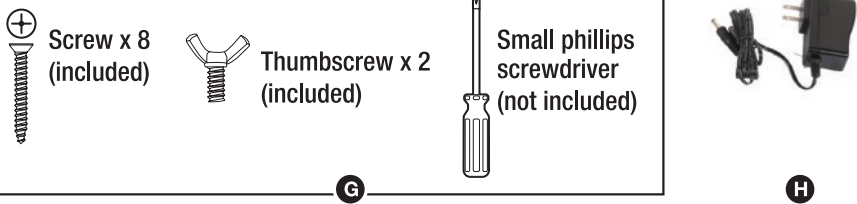


BEFORE ASSEMBLING, REMOVE ALL THE ABOVE PARTS FROM BOX. IF ANY PART IS MISSING, DO NOT ATTEMPT TO ASSEMBLE THE PRODUCT AND CONTACT CUSTOMER SERVICE AT CUSTOMERSERVICE@SVICHINA.COM.

Assembly Instructions:

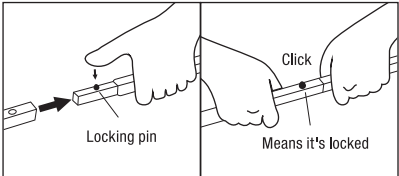

Note: Throughout the instructions, Left and Right are from the character's point of view.

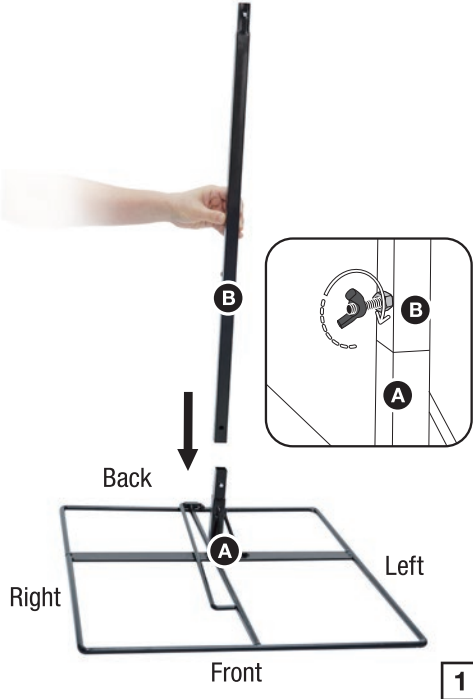


STEP 1

Note: The longer end of the (A) Base goes towards the front. Left and right are from the character's point of view. Place the (A) Base on a flat solid ground. Connect the (B) Support Pole to the (A) Base using the quick connect push button and pre drilled hole and secure the connection using one of the provided Thumb-screws and rotate clockwise until snug as shown in Figure 1. Slide the support strut from the (A) Base into the housing on the (B) Support Pole as shown in Figure 2.




STEP 2

Connect (C) Body to the (B) Support Pole using the quick connect push button and pre drilled hole as shown in Figure 1. And secure connection using the remaining thumbscrew and rotate clockwise until snug as shown in Figure 2.

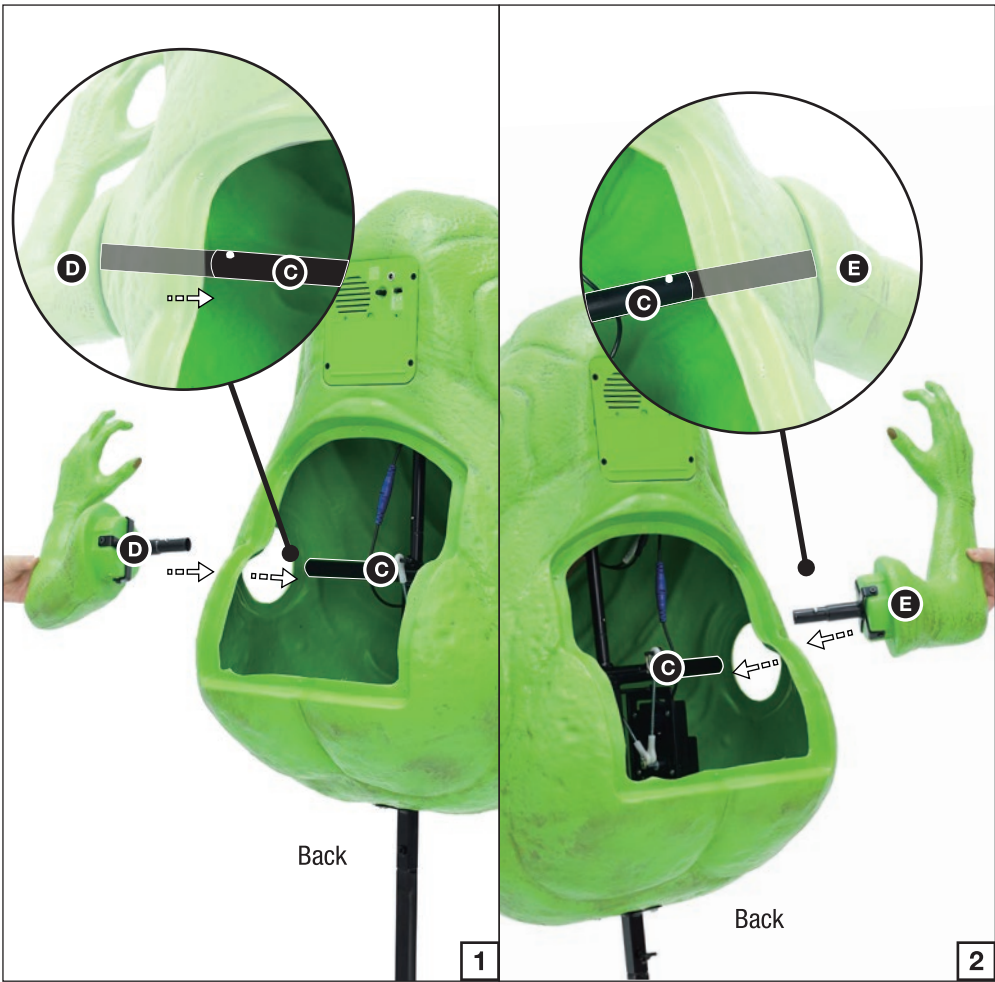

STEP 3
Insert the (D) Left Arm into the hole on the left side of the (C) Body and secure the (D) Left Arm using the quick connect and push button hole as shown in Figure 1. Insert the (E) Right Arm into the hole on the right side of the body and secure the (E) Right Arm using the quick connect push button and pre drilled hole as shown in Figure 1.

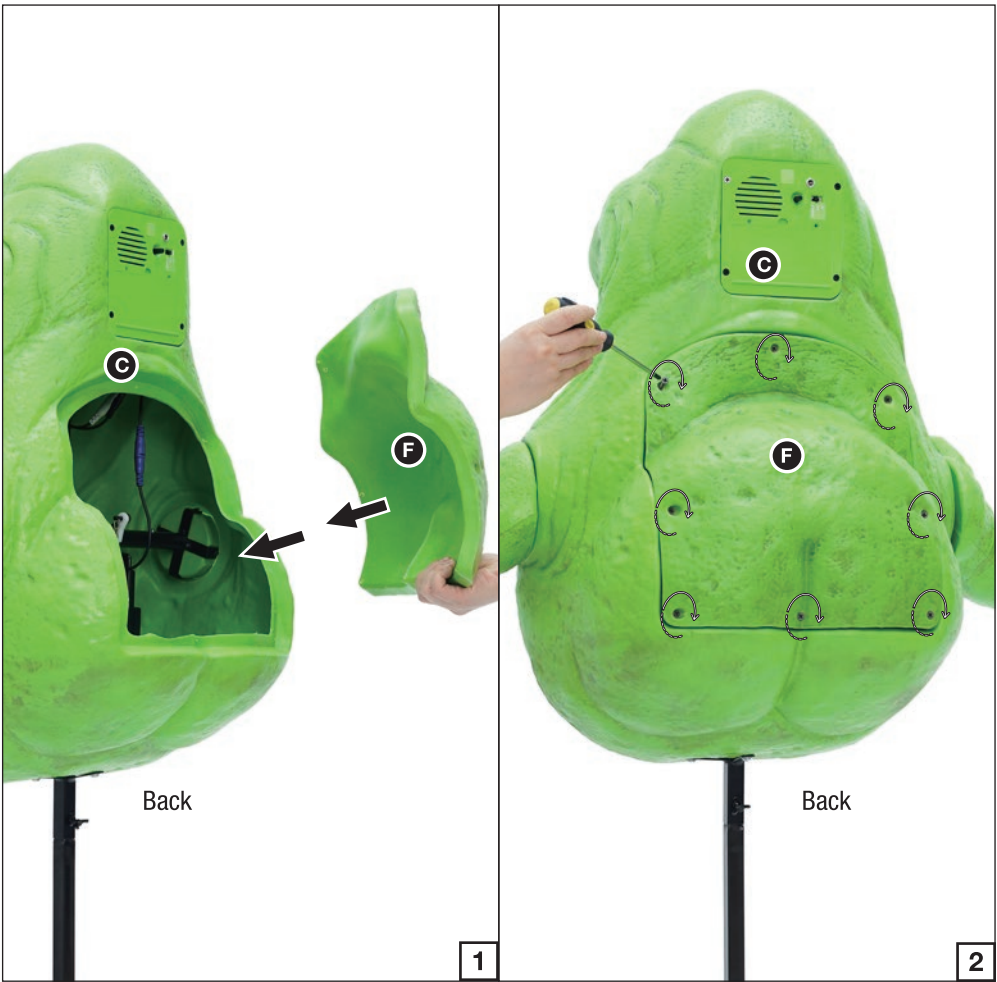

STEP 4
Place the (F) Cover on the back of the (C) Body as shown in Figure 1. To secure (F) Cover, place all provided screws from the (G) Assembly Screws into the screw holes on the (F) Cover and tighten all screws as shown in Figure 2. NOTE: Do not over tighten the screws.

OPERATION INSTRUCTIONS:


1. Plug the power adapter into a standard power outlet and adjust the settings on the Function Control Box, located on the (C) Body, as desired.

2. Settings:

ON	This switch mode will continuously operate the lights, sound and animation of the item.
OFF	This switch mode deactivates the lights, sound and animation of the item, unless otherwise the switch is turned to another mode.
Sensor	This switch mode will activate sound, LED Light Up Eyes, and animation when the Infra-red (IR) sensor is activated and will operate for 1 audio-cycle with each activation. The Infra-red (IR) sensor has a range of up to 2 m/6.5 ft. and will activate when someone comes within an 80-degree angle from left-to-right, as well as from above and below.
	Raise or lower the volume using the volume control turn dial, turn all the way down to turn the volume off.



Your Animated Slimer is fully assembled. Plug in and turn on to let the fun begin!

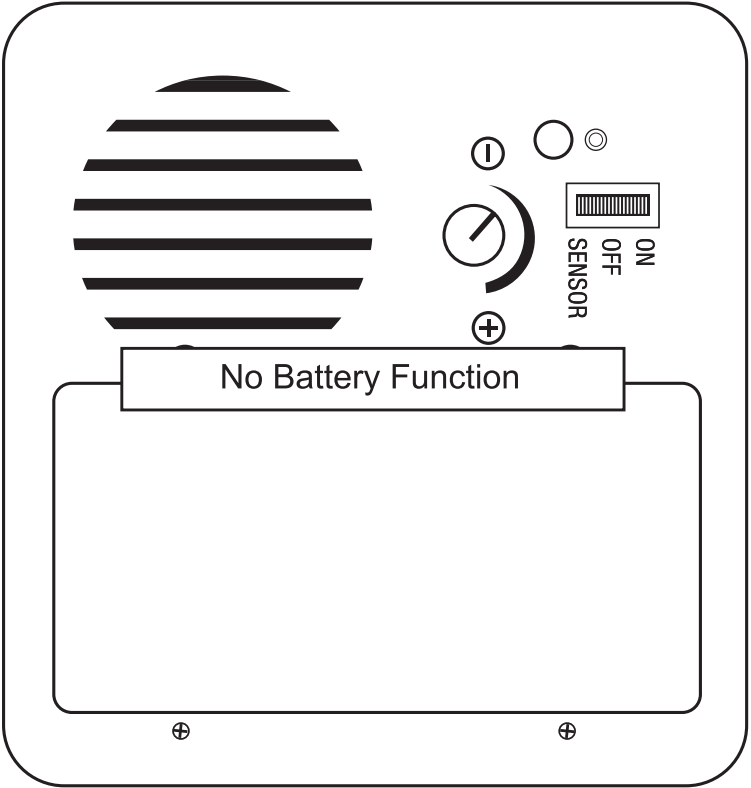

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

CAUTION: Changes or modifications not expressly approved by the party responsible for compliance could void the user’s authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures: Reorient or relocate the receiving antenna, Increase the separation between the equipment and receiver, Connect the equipment into an outlet on a circuit different from that to which the receiver is connected. Consult the dealer or experienced radio/TV technician for help.

Seasonal Visions International, Berkeley, CA 94710, USA, Tel: (855) 428-3921.

IMPORTANT SAFETY INSTRUCTIONS -SAVE THESE INSTRUCTIONS

DANGER-TO REDUCE THE RISK OF FIRE OR ELECTRIC SHOCK

CAREFULLY FOLLOW THESE INSTRUCTIONS

The important safety instructions shall be provided with a power unit and include those items in the following list that are applicable. The statement "READ AND FOLLOW ALL SAFETY INSTRUCTIONS"shall be prominently displayed and precede the list, and the statement "SAVE THESE INSTRUCTIONS"shall be prominently displayed and follow the list. The word"WARNING"shall be entirely in upper case letters.

When using electrical products, basic precautions should always be practiced including the following:

READ AND FOLLOW ALL SAFETY INSTRUCTIONS.

Read and follow all instructions that are on the product or provided with the product.

For a cord-connected or direct plug-in power unit, do not use an extension cord.

Reference the National Electrical Code, NFPA 70, specifically for the installation of wiring and clearances from power and lighting conductors.

Installation work and electrical wiring must be done by qualified person(s) in accordance with all applicable codes and standards, including fire-rated construction.

For a cord-connected or direct plug-in power unit, do not install or use within 10 feet of a pool.

WARNING: Risk of Electric Shock. When used outdoors, install only to a covered Class A GFCI protected receptacle that is weatherproof with the power unit connected to the receptacle. If one is not provided, contact a qualified electrician for proper installation. Ensure that the power unit and cord do not interfere with completely closing the receptacle cover.

WARNING: Risk of Fire. Installation involves special wiring methods to run wiring through a building structure. Consult a qualified electrician.