

EASY ASSEMBLY AND OPERATION INSTRUCTIONS

FUN94359-ST Eerie Tongue Demon Animated Decoration

This item, when assembled by the following instructions, should take 20 minutes to assemble. Please follow the step by step guide and enjoy you're the Magic Witch!

WARNING

This item is not a toy and should be used for decoration only. This item contains small parts that can be a choking hazard. Keep all plastic and wire parts away from children. This product is intended for people ages 14 and up.


Please read all instructions carefully before assembling. Save this instruction sheet for future reference.

PARTS LIST

A. Base	1PC
B. Shoes	2PCS
C. Support poles	4PCS
D. Pants	1PC
E. Torso frame	1PC
F. Hip	1PC
G. Clothes	1PC
H. Right arm	1PC
I. Left arm	1PC
J. Head	1PC
K. Tongue	1PC
L. Try me button	1PC
M. Adaptor	1PC




STEP 1: SETTING UP THE SHOES AND SUPPORT POLES

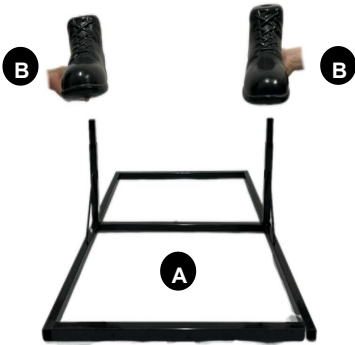

Shoes(B) over the base (A) as show.


Attach support poles (C) to the base (A) as shown and secure by aligning the quick-connected push button into the pre-drilled holes.

Set the support poles (B) as show.

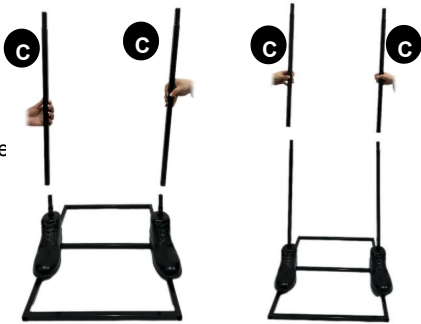

STEP 2: SETTING UP THE TORSO FRAME AND COSTUME

Lower the pants (D) over the support poles. Attach the torso frame (E) as shown and secure by aligning the quick-connected push button into the pre-drilled holes. then lower the hip (F) over the torso frame into the hole on the torso frame. Then set the clothes (G) as show.

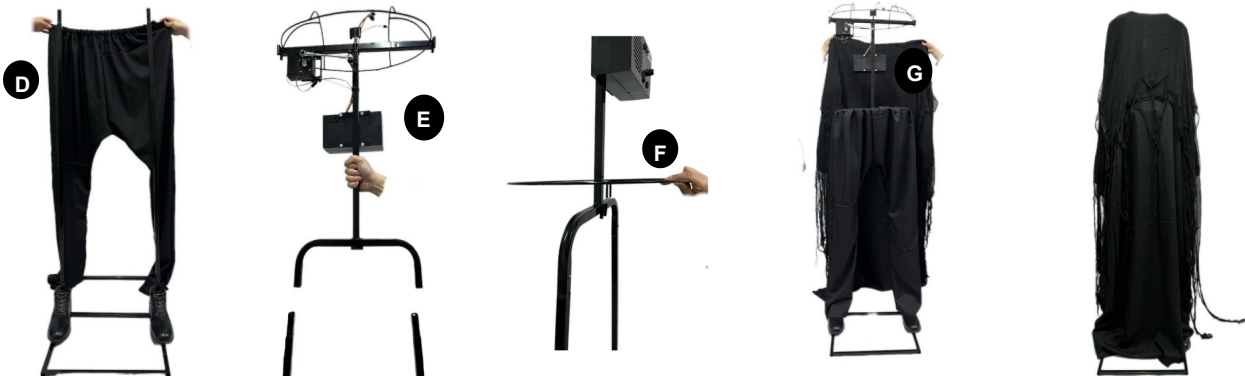

STEP 3: ATTACHING THE ARMS, HEAD AND TONGUE

Slide right arm (H) up through the right sleeve and slide the forked- hooked into hole on the torso frame, repeat for the left arm (I). Set the head (J) onto the torso frame into the hole, Carefully connect connector jack wired from the function box to the head. Attach tongue (K) to the mouth as shown and secure by aligning the quick-connected push button into the pre-drilled holes.



FINISH




OPERATION INSTRUCTION

Eyeball Monster Animatronic Decoration has 3 operation settings which can be the main function control box on the torso frame.

.ON: This setting allows the item to be activated.

TRY ME: This setting allows the item to only be activated when you push the try me button is activated.

.Sensor: This setting included sound sensor, this setting allows the item to only be activated when the sensor is activated. the item will operate for one audio-cycle with sensor activation.

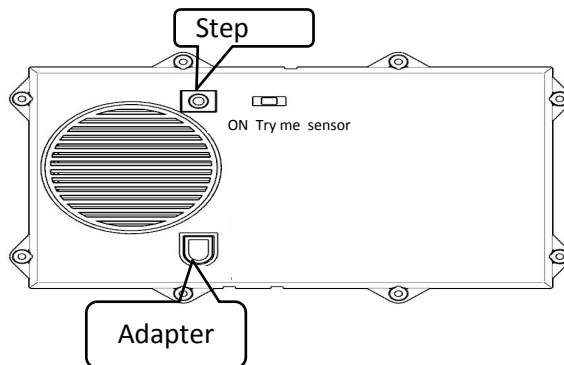

FCC

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Warning: Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.