

EASY ASSEMBLY AND OPERATION INSTRUCTIONS

FUN96450 Ghostbusters Terror Dog Animatronic



Please follow the Step by Step Guide and enjoy your Ghostbusters Terror Dog Animatronic!

Please read all instructions carefully before assembling. Save this instruction sheet for future reference.

CARE AND STORAGE INSTRUCTIONS

For best performance operate your item indoors. When not in use, store this product in its original packing. Keep away from heat and moisture.

⚠ WARNING

This item is not a toy and should be used for decoration only. This item contains small parts that can be a choking hazard. Keep all plastic and wire parts away from children.

- 1. Please use the adapter supplied by manufacturer.
- 2. Please assemble item according to instructions. Connect all wires according to matching color.
- 3. Children should be supervised by adults. Item should not be grabbed, as it becomes a tipping hazard.
- 4. Keep all away from the adapter, as it heats up during operation.

PARTS LIST

- A. Body Form x 1
 - B. Left Front Leg x 1
 - C. Right Front Leg x 1
 - D. Left Hind Leg x 1
 - E. Right Hind Leg x 1
 - F. Tail x 1
 - G. Head x 1
 - H. Chest Cover x 1
 - I. Left Long Horn x 1
 - J. Right Long Horn x 1
 - K. Left Short Horn x 1
 - L. Right Short Horn x 1
 - M. Adapter
- Input: 100 - 240V AC 50/60Hz
- Output: 5.9V 2.0A




BEFORE ASSEMBLING, REMOVE ALL THE ABOVE PARTS FROM BOX. IF ANY PART IS MISSING, DO NOT ATTEMPT TO ASSEMBLE THE PRODUCT AND CONTACT CUSTOMER SERVICE AT CUSTOMERSERVICE@SVICHINA.COM

Assembly Instructions:




STEP 1
Place the (A) Body Form on a soft and flat ground so that its underside is facing up. With insert and twist manner connect the (B) Left Front Leg, (C) Right Front Leg, the (D) Left Hind Leg and the (E) Right Hind Leg to the (A) Body Form as shown in Figure 1.

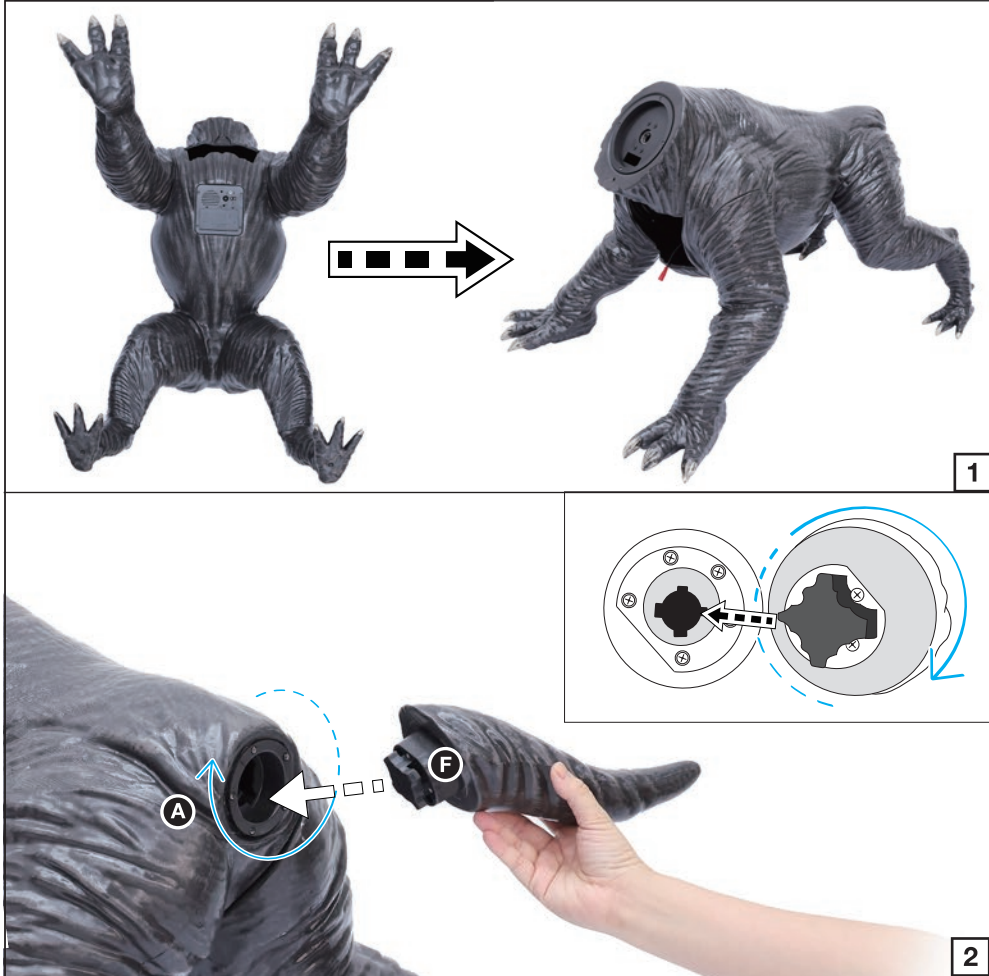

STEP 2
Position the assembly to an upright position as shown in Figure 1. Align and slide the peg of the (F) Tail into the hole at the back of the (A) Body Form, and secure connection by turning the (F) Tail clockwise as shown in Figure 2.



STEP 3
Attach the (C) Head to the (A) Body Form by sliding the pole into the round hole while guiding the wire into the rectangular opening and connect both poles using the available quick connect push button and pre-drilled hole as shown in Figure 1

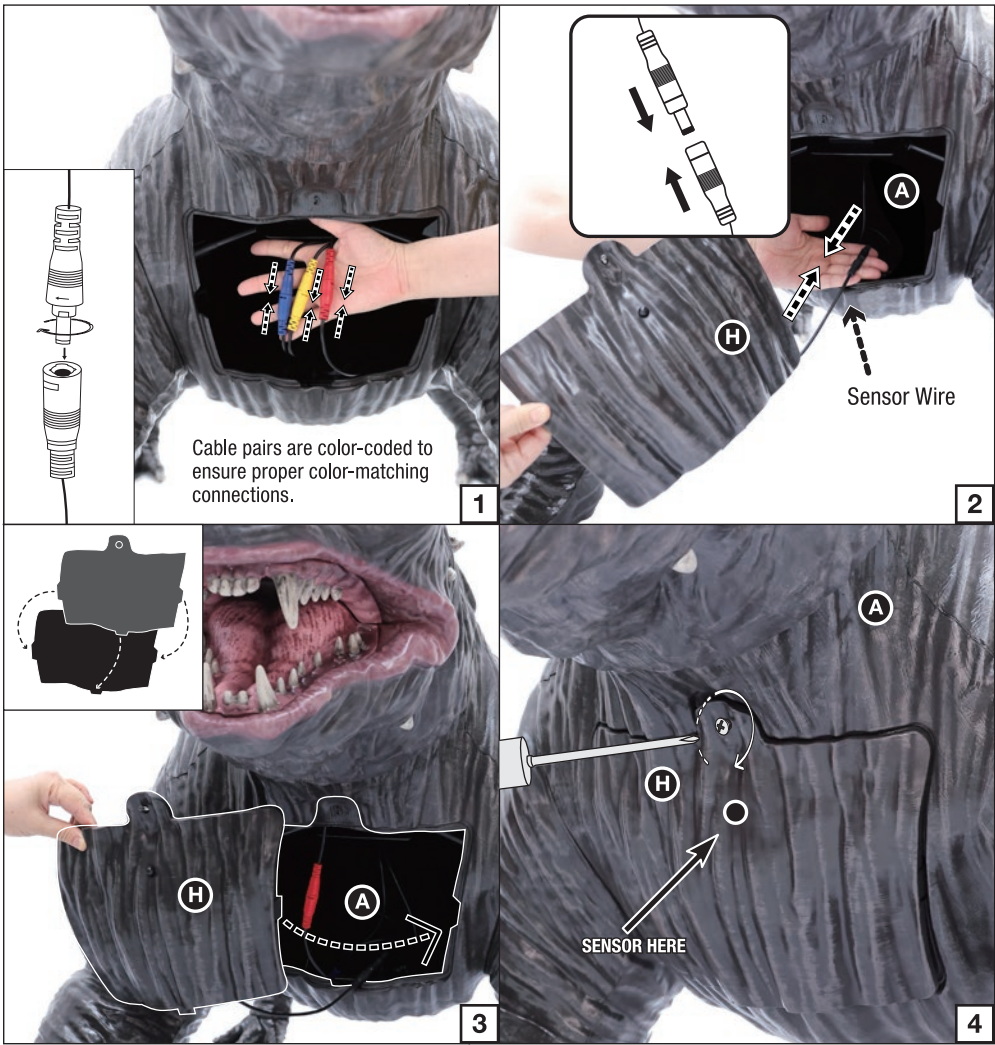

STEP 4
With insert and twist manner, connect cables from the (G) Head to their corresponding cable pairs according to their colors as shown in Figure 1. Then connect the sensor cable coming from the (H) Chest Cover to its corresponding cable pair from the function control box as shown in Figure 3. Place the (H) Chest Cover over the chest of the (A) Body Form as shown in Figure 3. And secure the (H) Chest Cover to the (A) Body Form by tightening the screw provided using a Phillips screwdriver as shown in Figure 4.



STEP 5
Align and insert the peg of the (I) Left Long Horn into the hole on the top left side of the (G) Head and secure the connection by twisting the (I) Left Long Horn clockwise, repeat the step when attaching the (J) Right Long Horn as shown in Figure 1. Your Ghostbusters Terror Dog is now fully assembled. Plug in and turn on to let the fun begin!

OPERATION INSTRUCTIONS:

1. Plug the power adapter into a standard power outlet and adjust the settings on the Function Control Box, located on the (A) Body Form, as desired.

2. Settings:

ON	This switch mode will continuously operate the lights, sound and animation of the item.
Sensor	This switch mode will activate sound, LED Light Up Eyes and animation when the Infra-red (IR) sensor is activated and will operate for one activity cycle with each activation. The Infra-red (IR) sensor has a range of up to 2 m/6.5 ft. and will activate when someone comes within an 80-degree angle from left-to-right, as well as from above and below.
OFF	This switch mode deactivates the lights, sound and animation of the item, unless otherwise the switch is turned to another mode.
	Raise or lower the volume using the volume control turn dial, turn all the way down to turn the volume off.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

CAUTION: Changes or modifications not expressly approved by the party responsible for compliance could void the user’s authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures: Reorient or relocate the receiving antenna, Increase the separation between the equipment and receiver, Connect the equipment into an outlet on a circuit different from that to which the receiver is connected. Consult the dealer or experienced radio/TV technician for help.

Seasonal Visions International, Berkeley, CA 94710, CUSTOMERSERVICE@SVICHINA.COM

IMPORTANT SAFETY INSTRUCTIONS -SAVE THESE INSTRUCTIONS

DANGER! TO REDUCE THE RISK OF FIRE OR ELECTRIC SHOCK READ AND FOLLOW ALL SAFETY INSTRUCTIONS:

Read and follow all instructions that are on the product or provided with the product. For a cord-connected or direct plug-in power unit, do not use an extension cord. Reference the National Electrical Code, NFPA 70, specifically for the installation of wiring and clearances from power and lighting conductors. Installation work and electrical wiring must be done by qualified person(s) in accordance with all applicable codes and standards, including fire-rated construction. For a cord-connected or direct plug-in power unit, do not install or use within 10 feet of a pool.

WARNING: Risk of electric shock. When used outdoors, install only to a covered Class A GFCI protected receptacle that is weatherproof with the power unit connected to the receptacle. If one is not provided, contact qualified electrician for proper installation. Ensure that the power unit and cord do not interfere with completely closing the receptacle cover.

WARNING: Risk of Fire. Installation involves special wiring methods to run wiring through a building structure. Consult qualified electrician.

