

EASY ASSEMBLY AND OPERATION INSTRUCTIONS

FUN96667 Arty the clown



Please follow the step by step guide and enjoy your ARTY THE CLOWN !

Please read all instructions carefully before assembling. Save this instruction sheet for future reference.

CARE AND STORAGE INSTRUCTIONS

For best performance operate your item indoors. When not in use, store this product in its original packing. Keep away from heat and moisture.


⚠ WARNING

This item is not a toy and should be used for decoration only. This item contains small parts that can be a choking hazard. Keep all plastic and wire parts away from children.

1. Please use the adapter supplied by manufacturer.
2. Please assemble item according to instructions. Connect all wires according to matching color.
3. Children should be supervised by adults. Item should not be grabbed, as it becomes a tipping hazard.
4. Keep all away from the adapter, as it heats up during operation.

PARTS LIST

- A. Base x 1
 - B. Left Leg Pole x 1
 - C. Left Shoe Red x 1
 - D. Right Shoe Blue x 1
 - E. Right Leg Pole x1
 - F. Upper Leg Poles x 2
 - G. Foam Tubes x 2
 - H. Costume x 1
 - I. Hip Frame x 1
 - J. Body Frame x 1
 - K. Left Arm x 1
 - L. Left Hand with Bucket x 1
 - M. Right Arm x 1
 - N. Short Foam Tube x 1
 - O. Right Hand with Brush x 1
 - P. Head x 1
 - Q. Collar x 1
 - R. Hat x 1
 - S. Adapter (Included)
- Input: 100 - 240V AC 50/60Hz
Output: 5.9V 2.0A

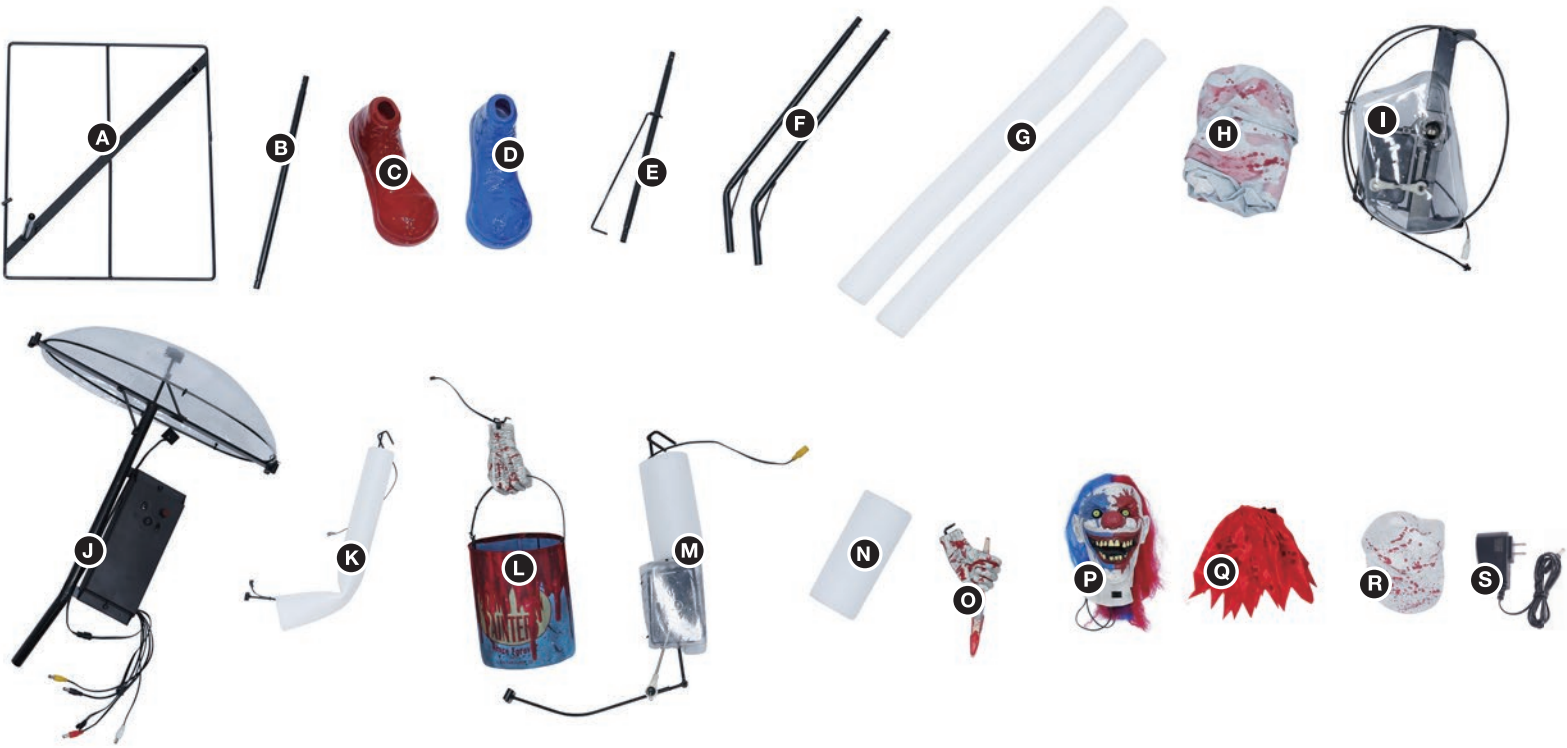

BEFORE ASSEMBLING, REMOVE ALL THE ABOVE PARTS FROM BOX. IF ANY PART IS MISSING, DO NOT ATTEMPT TO ASSEMBLE THE PRODUCT AND CONTACT CUSTOMER SERVICE AT CUSTOMERSERVICE@SVICHINA.COM


Assembly Instructions:

STEP 1

Note: Throughout the instructions, left and right are relative to the character. Connect the (B) Left Leg Pole to the (A) Base using the quick connect push button and pre-drilled hole as shown in Figure 1. Slide the (C) Left Shoe Red over the (B) Left Leg Pole and let it rest on the (A) Base as shown in Figure 2. Slide the (D) Right Shoe Blue over the right pole on the right side of the (A) Base as shown in Figure 3.

STEP 2


Connect the (E) Right Leg Pole to the (A) Base using the quick connect push button hole and pre-drilled hole and insert the prong from the (E) Right Leg Pole into the housing available on the (A) Base as shown in Figure 1. Connect both the (F) Upper Leg Poles to the assembled lower legs using the quick connect push buttons and pre-drilled holes as shown in Figure 2.

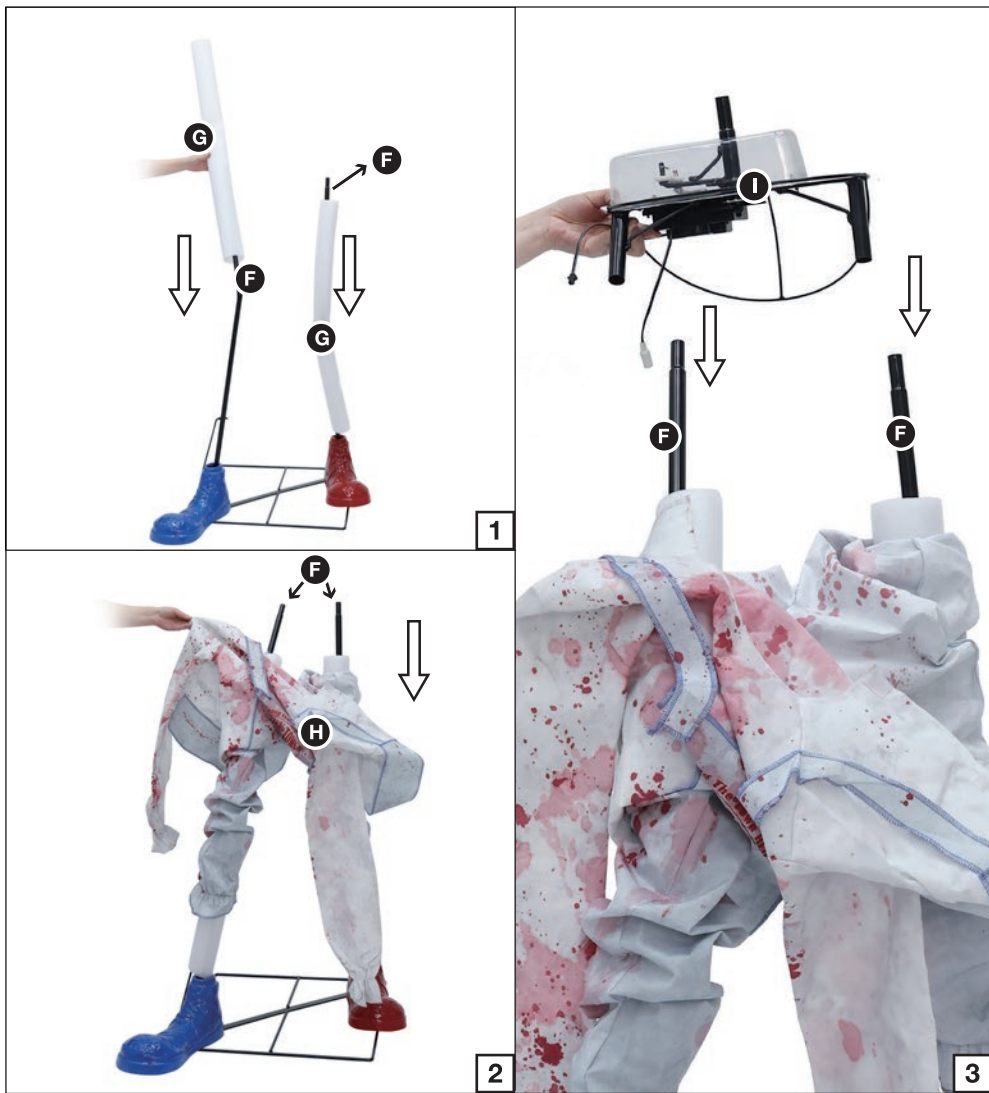


STEP 3
Slide the (G) Foam Tubes over the assembled legs as shown in Figure 1. Slide the (H) Costume over the assembled legs with foam tubes and ensure that the (F) Upper Leg Poles emerge from the top as shown in Figure 2. Connect the (I) Hip Frame to the (F) Upper Leg Poles using the quick connect and push button and pre-drilled holes as shown in Figure 3.



STEP 4
Connect the (B) Body Frame to the (I) Hip Frame using the available quick connect push button and pre-drilled hole as shown in Figure 1.

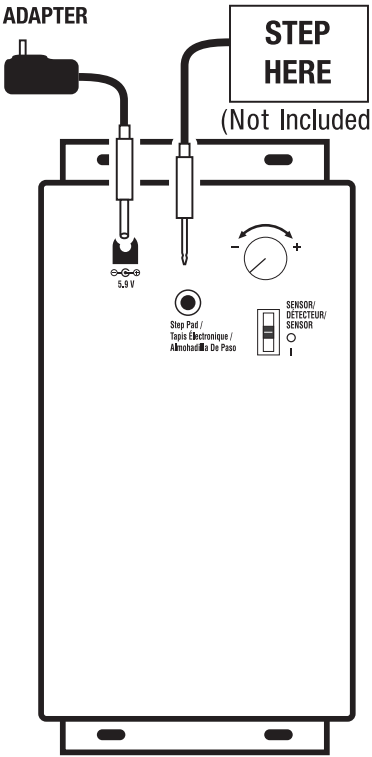


OPTIONAL: If you choose to use the Step Activation Pad, plug the connector into the input receiving jack marked "TRY ME" on the Function Control Box and set the Step pad in front of the character when ready to display.
Note: Do not plug the Power Adapter into power outlet until item assembly is completed.

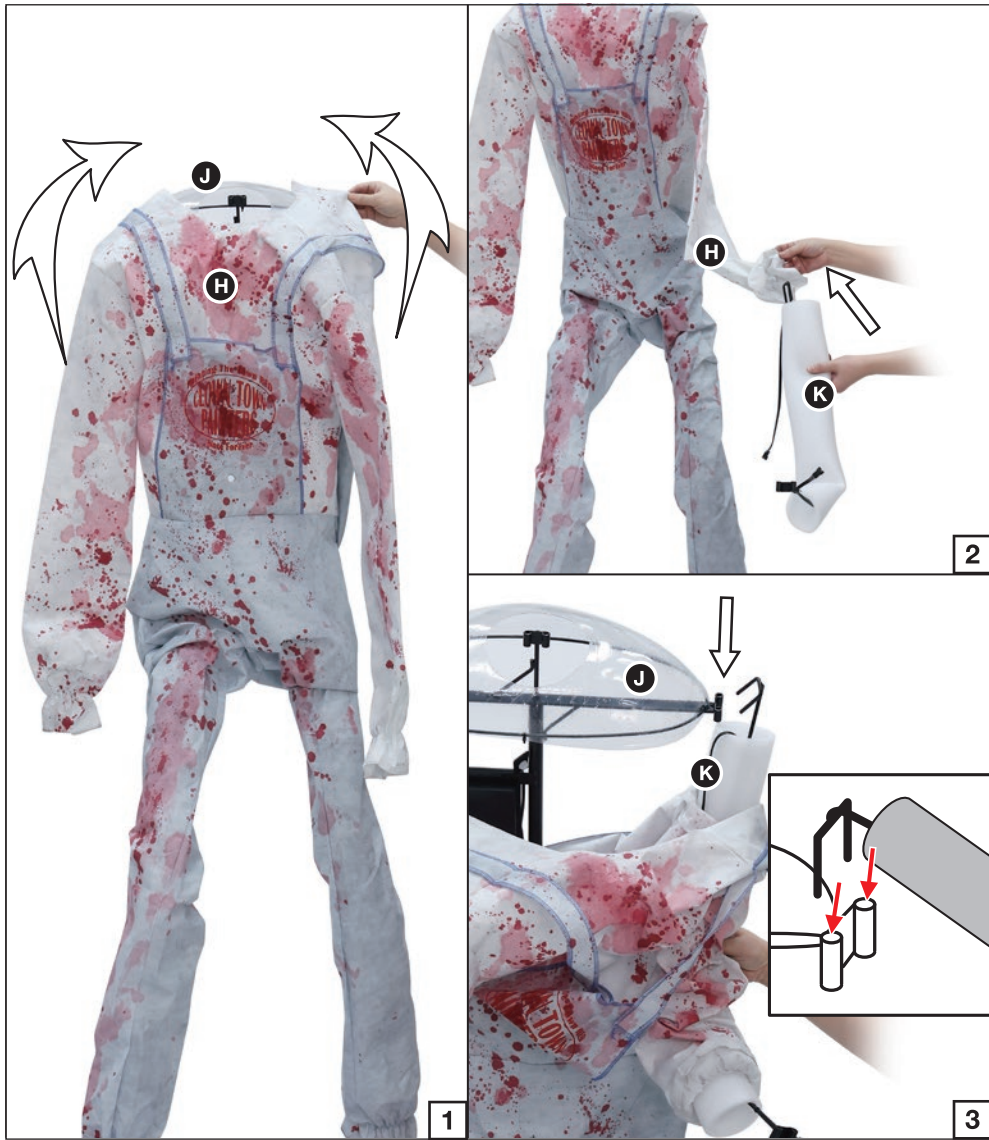

STEP 5
Bring the (H) Costume up over the shoulder of the (J) Body Frame as shown in Figure 1. Slide the (K) Left Arm up the left sleeve of the (H) Costume as shown in Figure 2. Then secure the (K) Left Arm to the (J) Body Frame by inserting the forked hook from the (K) Left Arm into the forked hook housing on the top left side of the (J) Body Frame as shown in Figure 3.




STEP 6
Slide the forked hook on the (L) Left Hand with Bucket into the forked hook housing available on the (K) Left Arm as shown in Figure 1. Connect the wire coming from the (L) Left Hand with Bucket to the wire from the (K) Left Arm as shown in Figure 2. And secure the left sleeve to the (L) Left Hand with Bucket using the available hook and loop closure as shown in Figure 3.

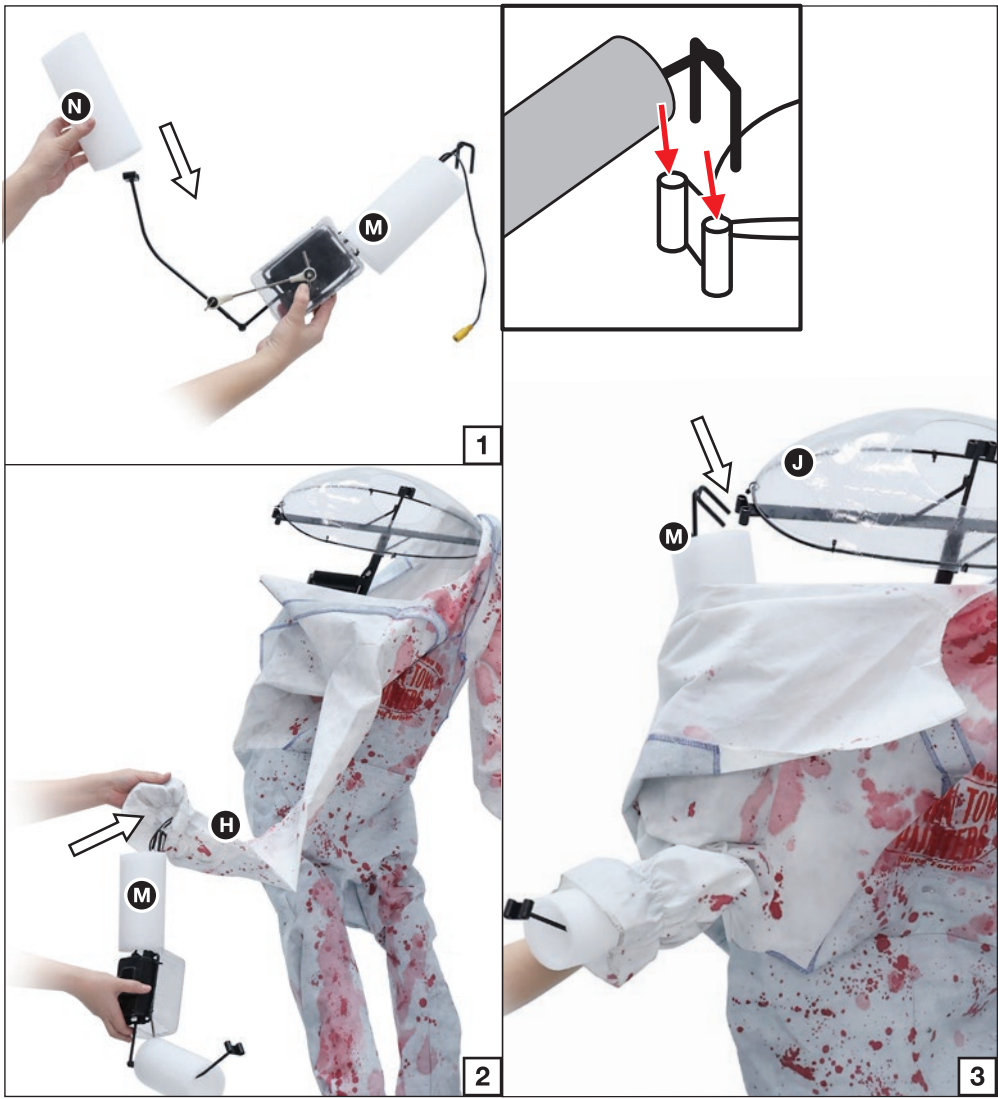

STEP 7
Slide the (N) Short Foam Tube over (M) Right Arm as shown in Figure 1. Slide the (M) Right Arm up the right sleeve of the (H) Costume as shown in Figure 2 and slide the forked hook from the (M) Right Arm into the forked hook housing available at the right side of the (J) Body Frame as shown in Figure 3.



STEP 8
Slide the forked hook of the (O) Right Hand with Brush into the forked hook housing available on the (M) Right Arm as shown in Figure 1. Then secure the right sleeve of the (H) Costume to the (O) Right Hand with Brush using the available hook and loop closure as shown in Figure 2. Slide the forked hook of the (P) Head into the forked hook housing available on the top of the (J) Body Frame as shown in Figure 3.

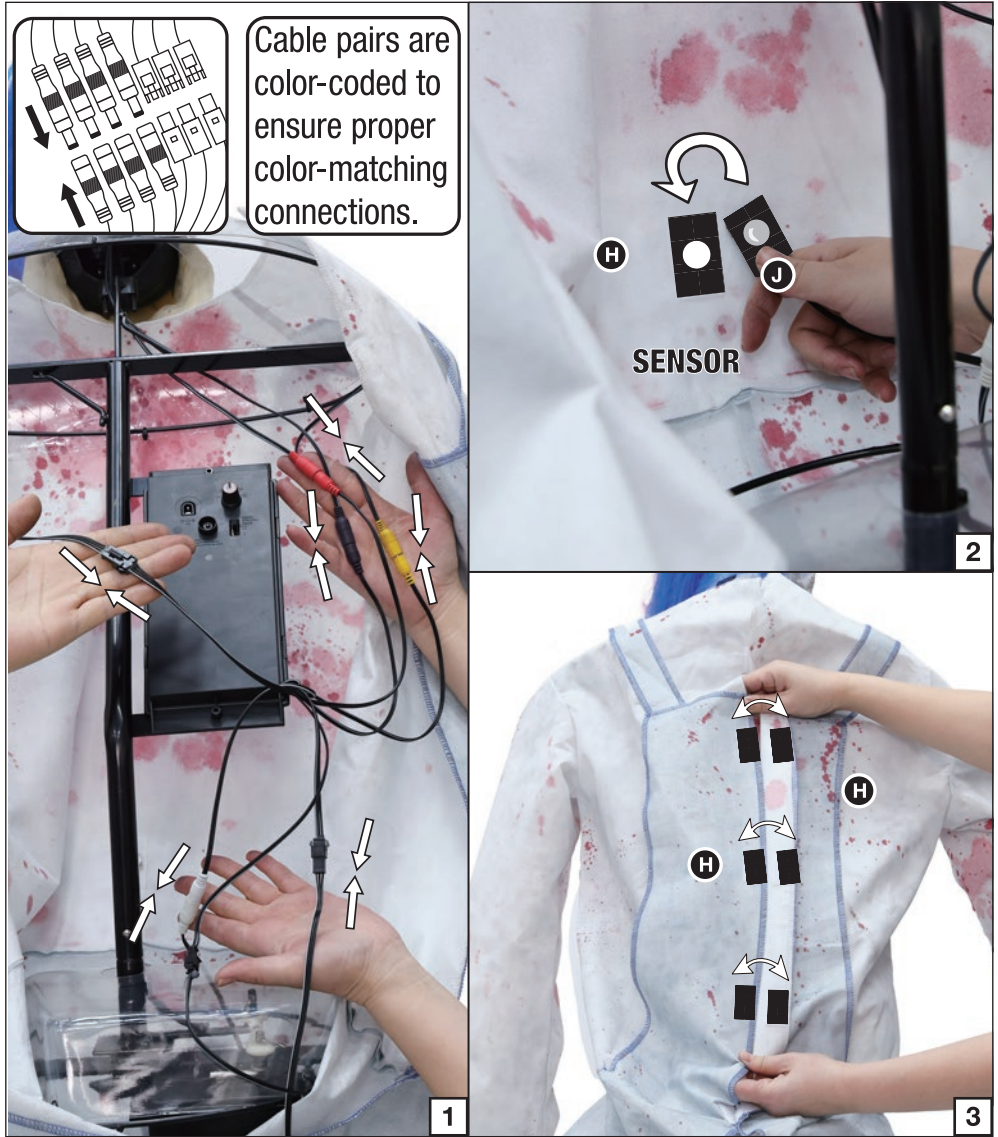

STEP 9
Connect the cables from the Function Control Box to their corresponding cables by shape and color as shown in Figure 1. Secure the sensor to the sensor hole on the (H) Costume using the available hook and loop closure as shown in Figure 2. Close the back of the (H) Costume using the available hook and loop closures as shown in Figure 3.



STEP 10
Loop and attach the (Q) Collar around the neck of the (P) Head using the available hook and loop closure as shown in Figure 1, 2 and 3.



STEP 11
Wear the (R) Hat over the (P) Head using the hook and loop closure as shown in Figure 1. Your Arty the Clown is now fully assembled. Plug in and turn on and let the fun begin!

OPERATION INSTRUCTIONS:

1. Plug the power adapter into a standard power outlet and adjust the settings on the Function Control Box, located on the (J) Body Frame, as desired.
2. Settings:

Sensor /Détecteur	This switch mode will activate lights, sound, and animation when the Infra-red (IR) sensor is activated and will operate for one activity cycle with each activation. The Infra-red (IR) sensor has a range of up to 2 m/6.5 ft. and will activate when someone comes within an 80-degree angle from left-to-right, as well as from above and below.
☐	OFF/TRY ME - This switch mode allows the item to be activated only if triggered by using a Step Here Try Me Activation Pad (Not Included). The item will operate for one activity cycle with each Try Me activation.
☒	ON - This switch mode will continually operate the lights, sound, and animation of the item.
<input type="range"/>	VOLUME - Raise or lower the volume using the volume control turn dial, turn all the way down to turn the volume off .

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

CAUTION: Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures: Reorient or relocate the receiving antenna, Increase the separation between the equipment and receiver, Connect the equipment into an outlet on a circuit different from that to which the receiver is connected. Consult the dealer or experienced radio/TV technician for help. Seasonal Visions International, Berkeley, CA 94710, CUSTOMERSERVICE@SVICHINA.COM

IMPORTANT SAFETY INSTRUCTIONS -SAVE THESE INSTRUCTIONS

DANGER! TO REDUCE THE RISK OF FIRE OR ELECTRIC SHOCK READ AND FOLLOW ALL SAFETY INSTRUCTIONS:

Read and follow all instructions that are on the product or provided with the product. For a cord-connected or direct plug-in power unit, do not use an extension cord. Reference the National Electrical Code, NFPA 70, specifically for the installation of wiring and clearances from power and lighting conductors. Installation work and electrical wiring must be done by qualified person(s) in accordance with all applicable codes and standards, including fire-rated construction. For a cord-connected or direct plug-in power unit, do not install or use within 10 feet of a pool.

WARNING: Risk of electric shock. When used outdoors, install only to a covered Class A GFCI protected receptacle that is weatherproof with the power unit connected to the receptacle. If one is not provided, contact qualified electrician for proper installation. Ensure that the power unit and cord do not interfere with completely closing the receptacle cover.

WARNING: Risk of Fire. Installation involves special wiring methods to run wiring through a building structure. Consult qualified electrician.

