

EASY ASSEMBLY AND OPERATION INSTRUCTIONS

FUN96943 Wendigo



Please follow the step by step guide and enjoy your Wendigo!

Please read all instructions carefully before assembling. Save this instruction sheet for future reference.

CARE AND STORAGE INSTRUCTIONS

For indoor and outdoor use. When not in use, store this product in its original packing. Keep away from heat and moisture.


⚠ WARNING

This item is not a toy and should be used for decoration only. This item contains small parts that can be a choking hazard. Keep all plastic and wire parts away from children.

1. Please use the adapter supplied by manufacturer.
2. Please assemble item according to instructions. Connect all wires according to matching color.
3. Children should be supervised by adults. Item should not be grabbed, as it becomes a tipping hazard.
4. Keep all away from the adapter, as it heats up during operation.

PARTS LIST

- A. Right Base x 1
 - B. Left base x 1
 - C. Left Lower Pole x 1
 - D. Right Lower Pole x 1
 - E. Hooves x 2
 - F. Upper Poles x 2
 - G. Foam Tubes x 2
 - H. Pants x 1
 - I. Pants Inserts x 2
 - J. Hip frame x 1
 - K. Hip Hoop x 1
 - L. Costume x 1
 - M. Body Frame x 1
 - N. Shoulder Frame x 1
 - O. Left Arm x 1
 - P. Right Arm x 1
 - Q. Left Hand x 1
 - R. Right Hand x 1
 - S. Head x 1
 - T. Left Antler x 1
 - U. Right Antler x 1
 - V. Loop Hook x 1
 - W. Back Frame x 1
 - X. Loop Cord w/ 6 x Cotter Pins and 3 x Screws
 - Y. Fur Coat x 1
 - Z. Base Extension x 4
 - Z1.Stakes x 4
 - Z2.Adapter (Included) x 1
- Input: 120V~ 50/60Hz
Output: 5.9V 2.0A

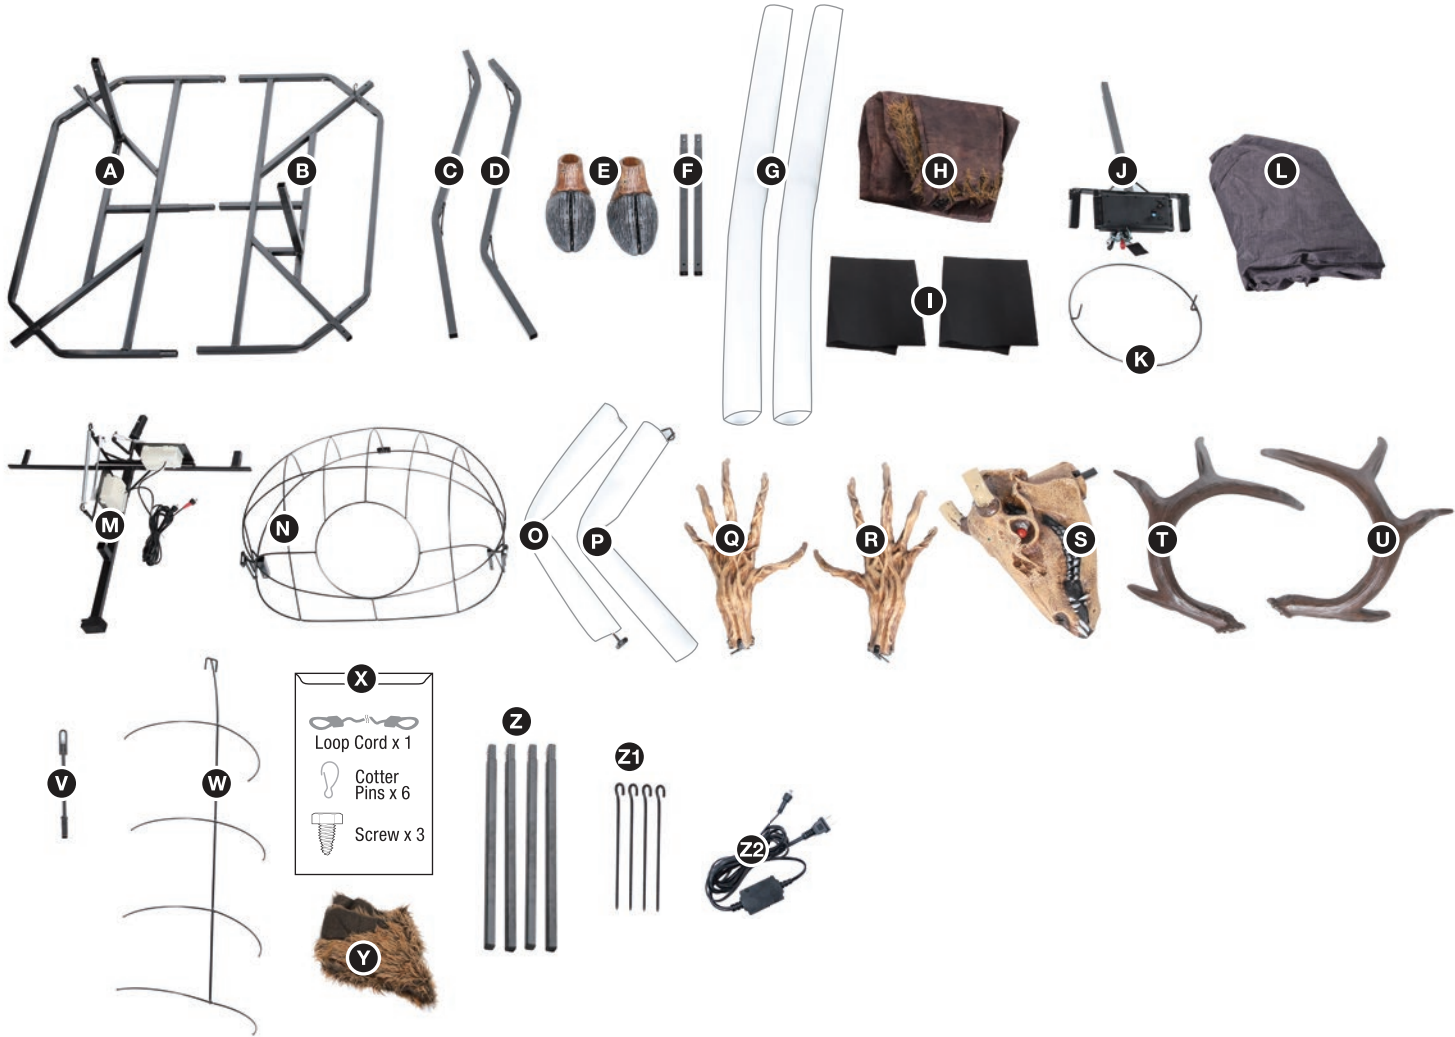

BEFORE ASSEMBLING, REMOVE ALL THE ABOVE PARTS FROM BOX. IF ANY PART IS MISSING, DO NOT ATTEMPT TO ASSEMBLE THE PRODUCT AND CONTACT CUSTOMER SERVICE AT CUSTOMERSERVICE@SVICHINA.COM

Assembly Instructions:

Locking Pin

Click

Means It's Locked

1

2

3

4

STEP 1

NOTE: Throughout the instructions, left and right are from the character's point of view.

Assemble the Base by connecting the (A) Right Base to the (B) Left Base using the available quick connect push buttons and pre-drilled holes as shown in Figure 1.

Attach the (C) Left Lower Pole to the Base using the available quick connect push button and pre-drilled hole as shown in Figure 2.

Attach the (D) Right Lower Pole to the Base using the available quick connect push button and pre-drilled hole as shown in Figure 3.

Slide both the (E) Hooves through the poles and down the Base as shown in Figure 4.

1

2

3

4

STEP 2

Connect one of the (F) Upper Poles to the (C) Left Lower Poles using the available quick connect push button and pre-drilled holes followed by connecting the other (F) Upper Poles to the (D) Right Lower Pole using the quick connect push button and pre-drilled hole as shown in Figure 1.



Slide the (G) Foam Tubes over the assembled poles as shown in Figure 2.

Slide the (H) Pants over the (G) Foam Tubes as shown in Figure 3.


Then secure the (I) Pants Inserts inside the (H) Pants and bring the (H) Pants up over the (I) Pants Inserts and allow the (G) Upper Poles to emerge from the top of the (H) Pants as shown in Figure 4.



1

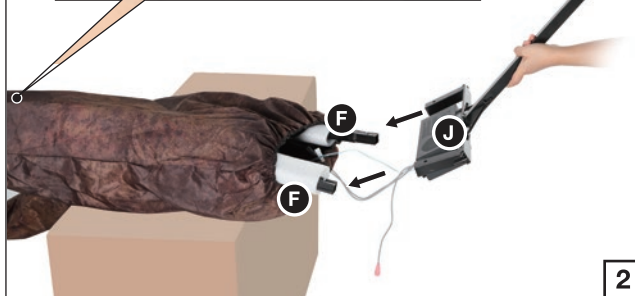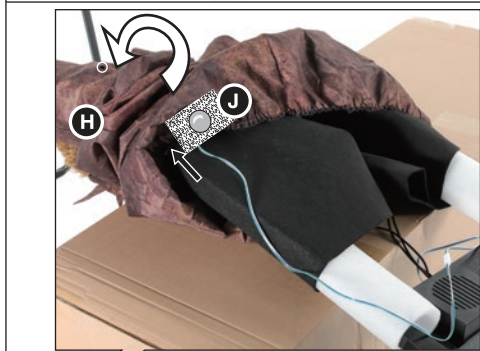


2

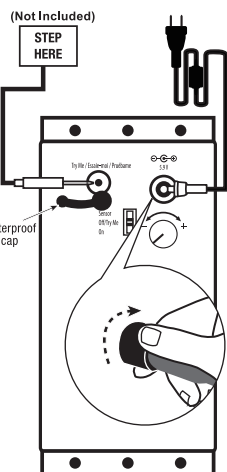


OPTIONAL: If you choose to use the Step Activation Pad, plug the connector into the input receiving jack marked "TRY ME" on the Function Control Box and set the Step pad in front of the character when ready to display.
Note: Do not plug the Power Adapter into power outlet until item assembly is completed.

STEP 3

For easier assembly, lean the frame onto the box it came in, as shown in Figure 1. Attach the (J) Hip Frame to the (F) Upper Poles using the available quick connect push button and pre-drilled holes as shown in Figure 2. And secure the Sensor from the Function Box to the hole available at the left knee of the (H) Pants as shown in Figure 3.

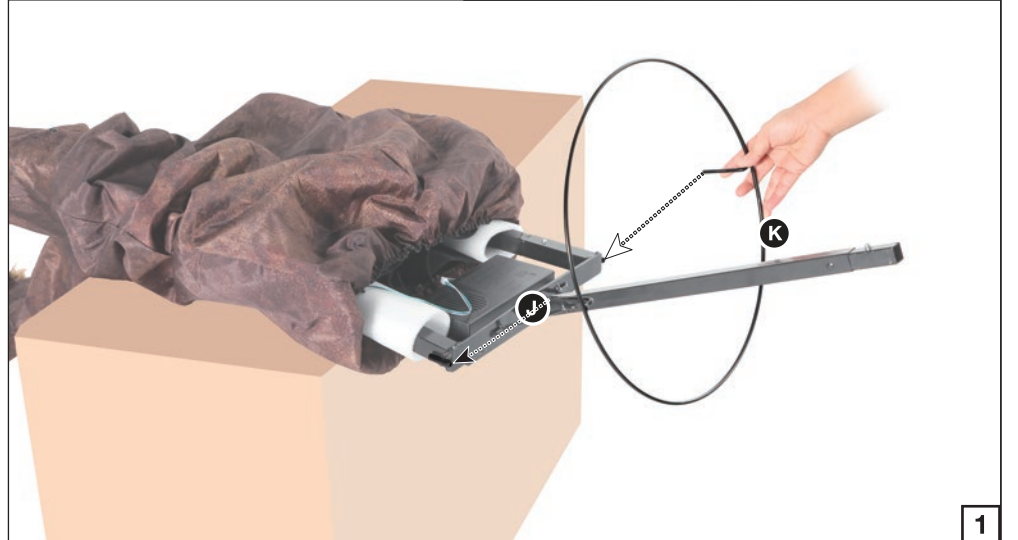

1

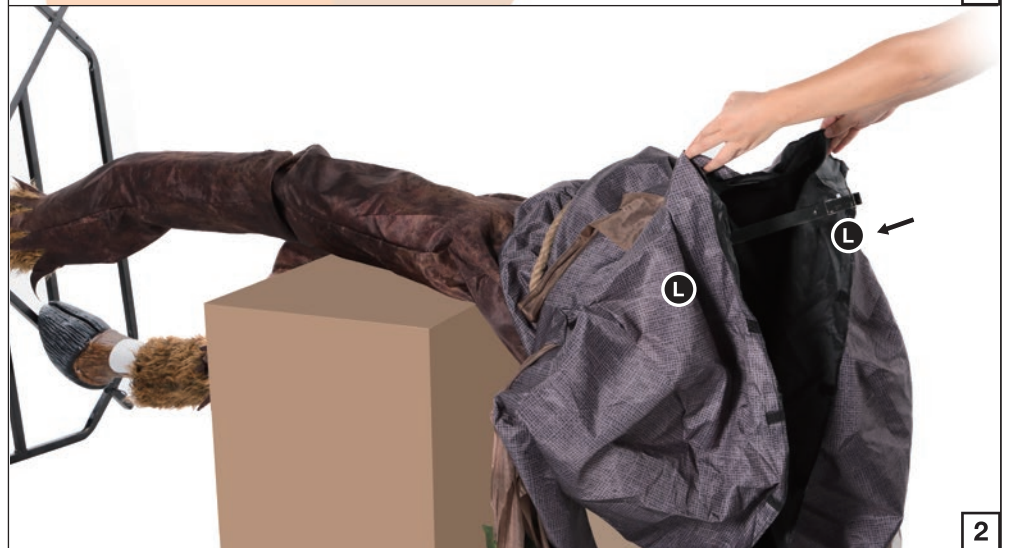


2

STEP 4

Insert the prongs from the (K) Hip Hoop into the housing available on the (J) Hip Frame as shown in Figure 1. Slide the (L) Costume over the (J) Hip Frame and allow the top of the (J) Hip frame to emerge as shown in Figure 2.




1

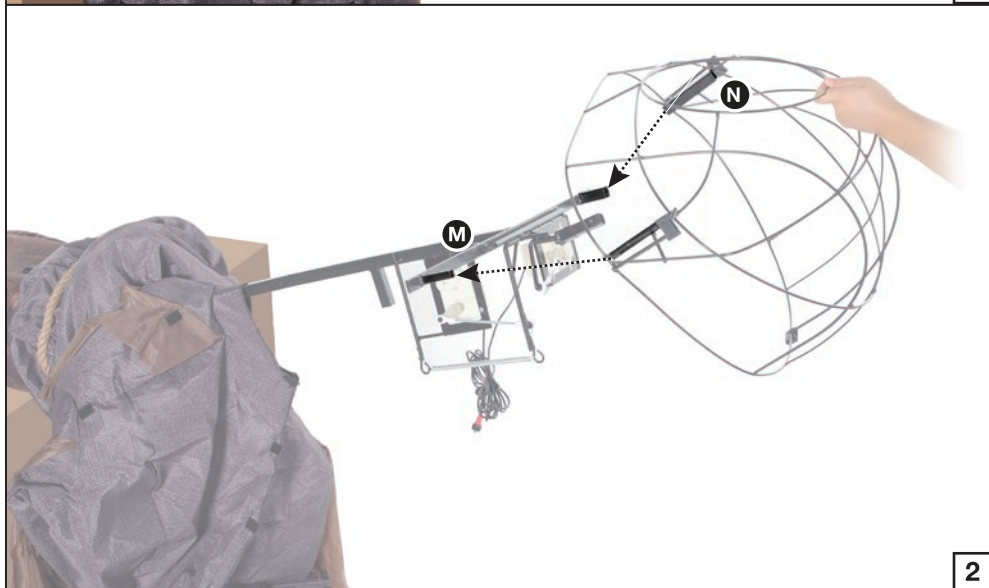

2

STEP 5

Connect the (M) Body Frame to the (J) Hip Frame using the quick connect push button and pre-drilled hole as shown in Figure 1. Insert the prongs from the (N) Shoulder Frame into the housing available on the (M) Body Frame as shown in Figure 2.

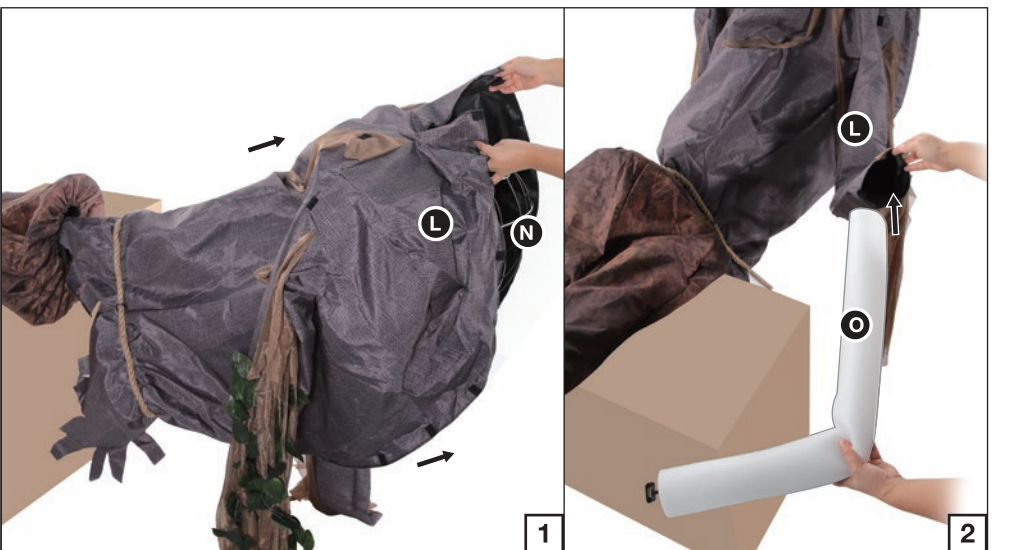

1



2




3

4


STEP 6

Bring the (L) Costume and secure on top of the (N) Shoulder Frame as shown in Figure 1. Insert the (O) Left Arm into the left sleeve of the (L) Costume as shown in Figure 2, and insert the forked hook of the (O) Left Arm to the forked hook housing available on the left side of the (N) Shoulder Frame as shown in Figure 3. Secure (O) Left Arm, using one of the Cotter Pins provided, and insert the Cotter Pin into the hole available on the forked hook of the (O) Left Arm as shown in Figure 4.

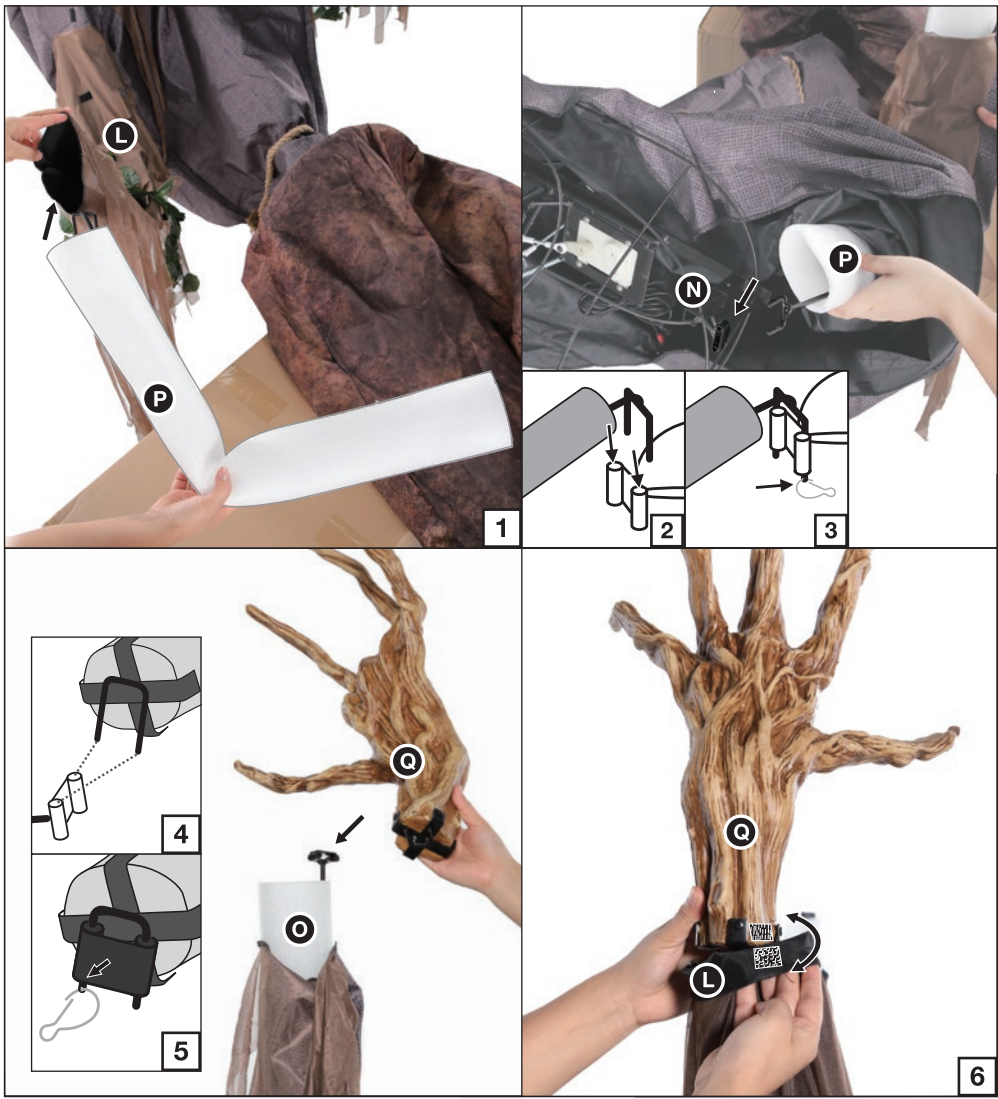

STEP 7

Insert the (P) Right Arm into the right sleeve of the (L) Costume as shown in Figure 1, and insert the forked hook of the (P) Right Arm to the forked hook housing available on the right side of the (N) Shoulder Frame as shown in Figure 2. Secure (P) Right Arm using one of the Cotter Pins provided, and insert the Cotter Pin into the hole available on the forked hook of the (P) Right Arm as shown in Figure 3. Insert the forked hook of the (Q) Left Hand into the forked hook housing available on the (O) Left Arm as shown in Figure 4 and Secure (Q) Left Hand using one of the Cotter Pins provided, and insert the Cotter Pin into the hole available on the forked hook of the (Q) Left Hand as shown in Figure 5. Secure the left sleeves on the (L) Costume to the (Q) Left Hand using the hook and loop closure as shown in Figure 4.

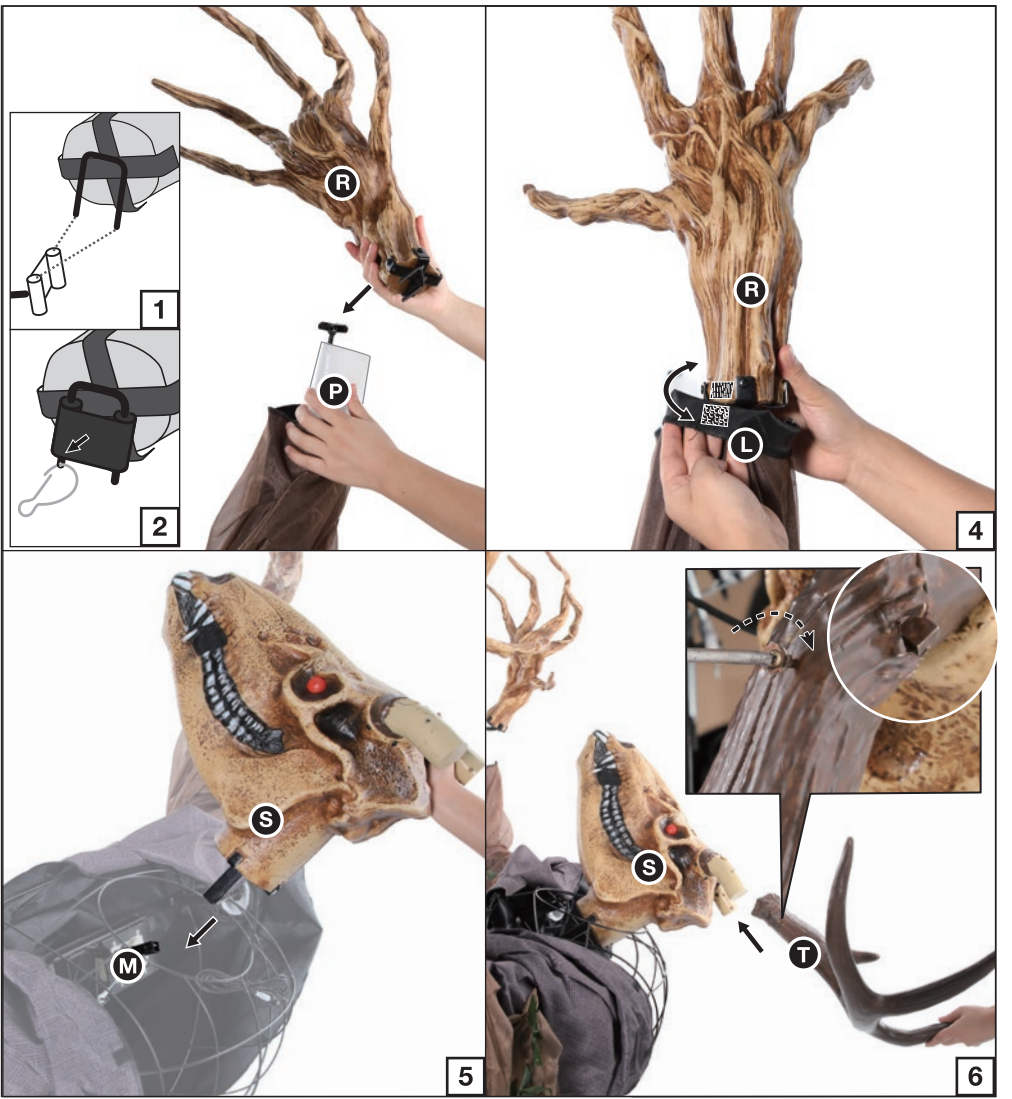


STEP 8

Insert the forked hook of the (R) Right Hand into the forked hook housing available on the (P) Right Arm as shown in Figure 1 and Secure (R) Right Hand using one of the Cotter Pins provided, and insert the Cotter Pin into the hole available on the forked hook of the (R) Right Hand as shown in Figure 2. Secure the right sleeves on the (L) Costume to the (R) Right Hand using the hook and loop closure as shown in Figure 4. Connect the (S) Head to the (M) Body Frame using the available quick connect push button and pre-drilled hole as shown in figure 5. Slide the (T) Left Antler over the antler stub available on the left side of the (S) Head and secure it by tightening the screw as shown in Figure 4.



STEP 9

Slide the (U) Right Antler over the antler stub available on the Right side of the (S) Head and secure it by tightening the screw as shown in Figure 1. Rotate the figure so it's facing downward. At the same time, flip the box on its small end to make it taller, so the Wendigo's Hands don't touch the ground. See Fig 2.

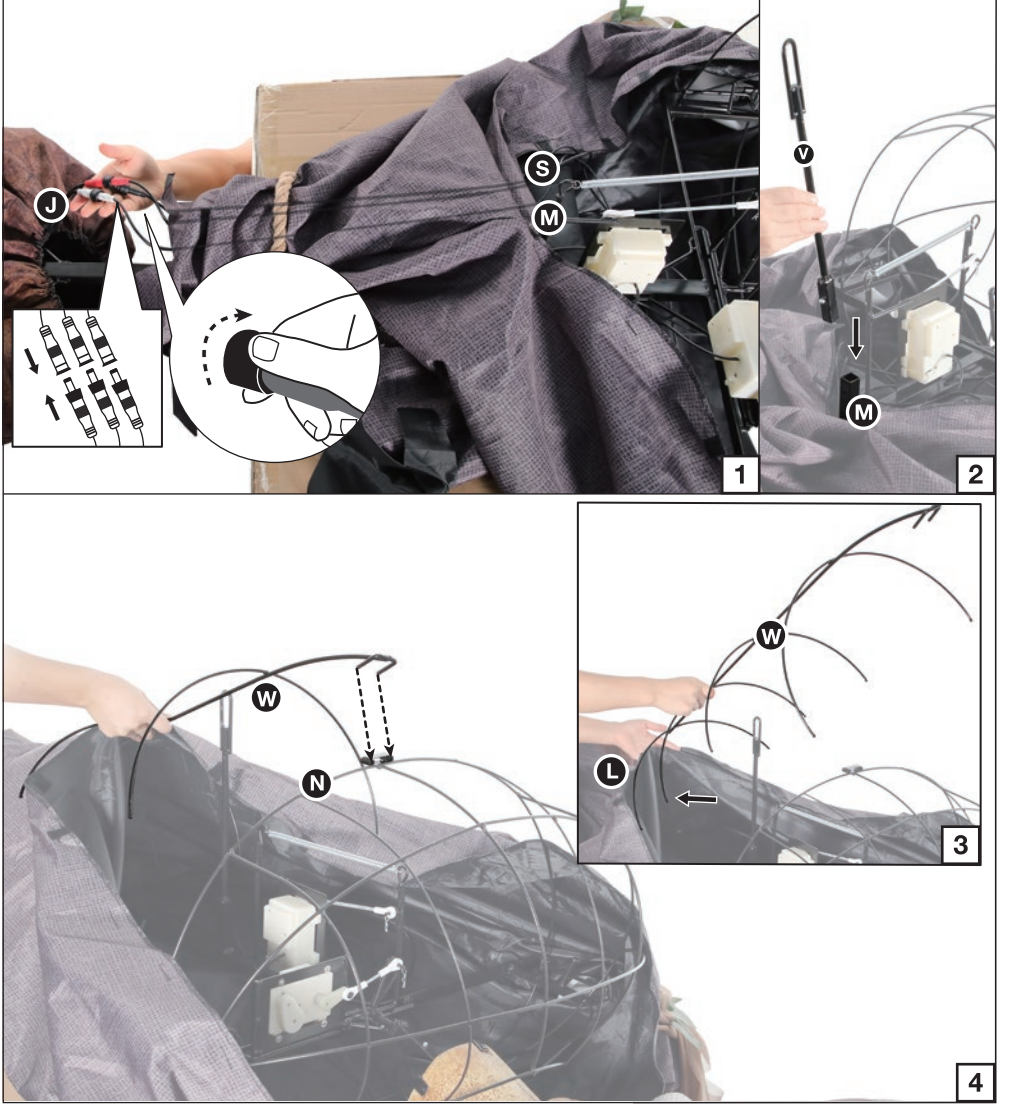


STEP 10

Connect all cables from the Function Control Box to their corresponding cable colors and shapes as shown in Figure 1. Connect the (V) Loop Hook to the (M) Body Frame using the available quick connect push button and pre-drilled hole as shown in Figure 2. Insert the (W) Back Frame into the (L) Costume as shown in Figure 3 and insert the forked hook available from the (W) Back Frame into the forked hook housing on the (N) Shoulder Frame as shown in Figure 4.



STEP 11
Loop in the (X) Loop Cord through the (V) Loop Hook as shown in Figure 1.
Close the back of the (L) Costume using the available hook and loop closures as shown in Figure 2.
Secure the (Y) Fur Coat on top of the (L) Costume using the available hook and loop closure at the back and both the sleeves as shown in Figure 3.

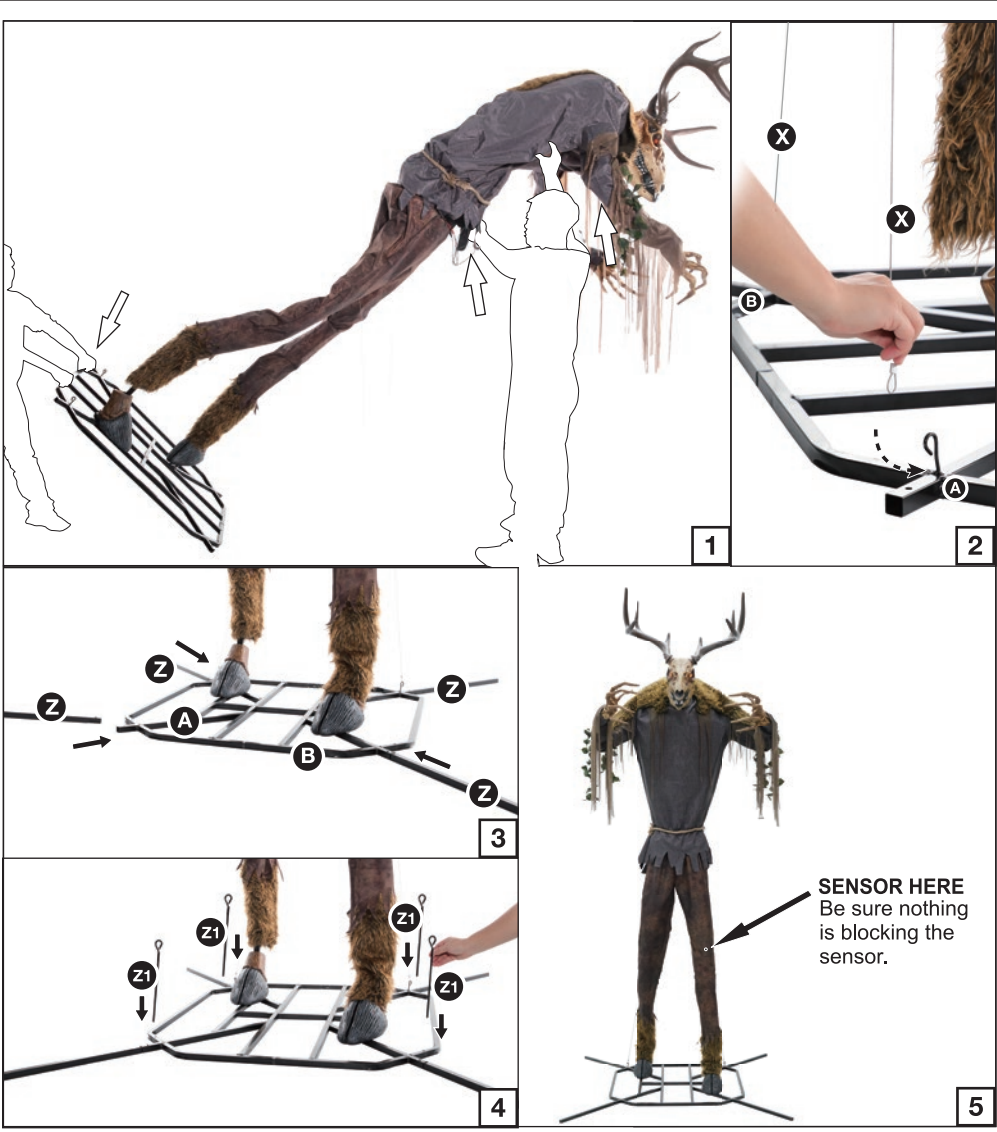

STEP 12
Reposition the Wendigo upright as shown in Figure 1.
Connect one end of the (X) Loop Cord to the available hook on the (B) Left Base and connect the other end to the hook available on the (A) Right Base as shown in Figure 2. For added stability, connect all 4 (Z) Base Extensions to the four corners of the Base using the available quick connect push buttons and pre-drilled holes as shown in Figure 3. If you're setting up your Wendigo on a soil ground or lawn you can use the provided (Z1) Stakes by inserting them to the hole available on the Base as shown in Figure 4. Your Wendigo is now fully assembled! Plug in and turn on let the fun begin.
WARNING: Waterproof cap must cover the TRY ME receiver when not in use.

OPERATION INSTRUCTIONS:

- 1. Plug the power adapter into a standard power outlet and adjust the settings on the Function Control Box, located on the (J) Hip Frame, as desired.
- 2. Settings:

SENSOR	This switch mode will activate lights, sound, and animation when the Infra-red (IR) sensor is activated and will operate for one activity cycle with each activation. The Infra-red (IR) sensor has a range of up to 2 m/6.5 ft. and will activate when someone comes within an 80-degree angle from left-to-right, as well as from above and below.
OFF/TRY ME	This switch mode allows the item to be activated only if triggered by using a Step Here Try Me Activation Pad (Not Included). The item will operate for one activity cycle with each Try Me activation.
ON	This switch mode will continually operate the lights, sound, and animation of the item.
	Raise or lower the volume using the volume control turn dial, turn all the way down to turn the volume off .

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

CAUTION: Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures: Reorient or relocate the receiving antenna, Increase the separation between the equipment and receiver, Connect the equipment into an outlet on a circuit different from that to which the receiver is connected. Consult the dealer or experienced radio/TV technician for help. Seasonal Visions International, Berkeley, CA 94710, CUSTOMERSERVICE@SVICHINA.COM

IMPORTANT SAFETY INSTRUCTIONS -SAVE THESE INSTRUCTIONS

DANGER! TO REDUCE THE RISK OF FIRE OR ELECTRIC SHOCK READ AND FOLLOW ALL SAFETY INSTRUCTIONS:

Read and follow all instructions that are on the product or provided with the product. For a cord-connected or direct plug-in power unit, do not use an extension cord. Reference the National Electrical Code, NFPA 70, specifically for the installation of wiring and clearances from power and lighting conductors. Installation work and electrical wiring must be done by qualified person(s) in accordance with all applicable codes and standards, including fire-rated construction. For a cord-connected or direct plug-in power unit, do not install or use within 10 feet of a pool.

WARNING: Risk of electric shock. When used outdoors, install only to a covered Class A GFCI protected receptacle that is weatherproof with the power unit connected to the receptacle. If one is not provided, contact qualified electrician for proper installation. Ensure that the power unit and cord do not interfere with completely closing the receptacle cover.

WARNING: Risk of Fire. Installation involves special wiring methods to run wiring through a building structure. Consult qualified electrician.

