


12-FT SCARECROW™

INSTALLATION AND OPERATING INSTRUCTIONS

KEEP ALL PLASTIC AND WIRE PARTS AWAY FROM CHILDREN.


WARNING: DO NOT TURN ON THE PROP UNTIL FULLY ASSEMBLED. STAY CLEAR OF THE PROP WHILE OPERATING.
ESTIMATED ASSEMBLY TIME: 25 MINUTES.

PARTS

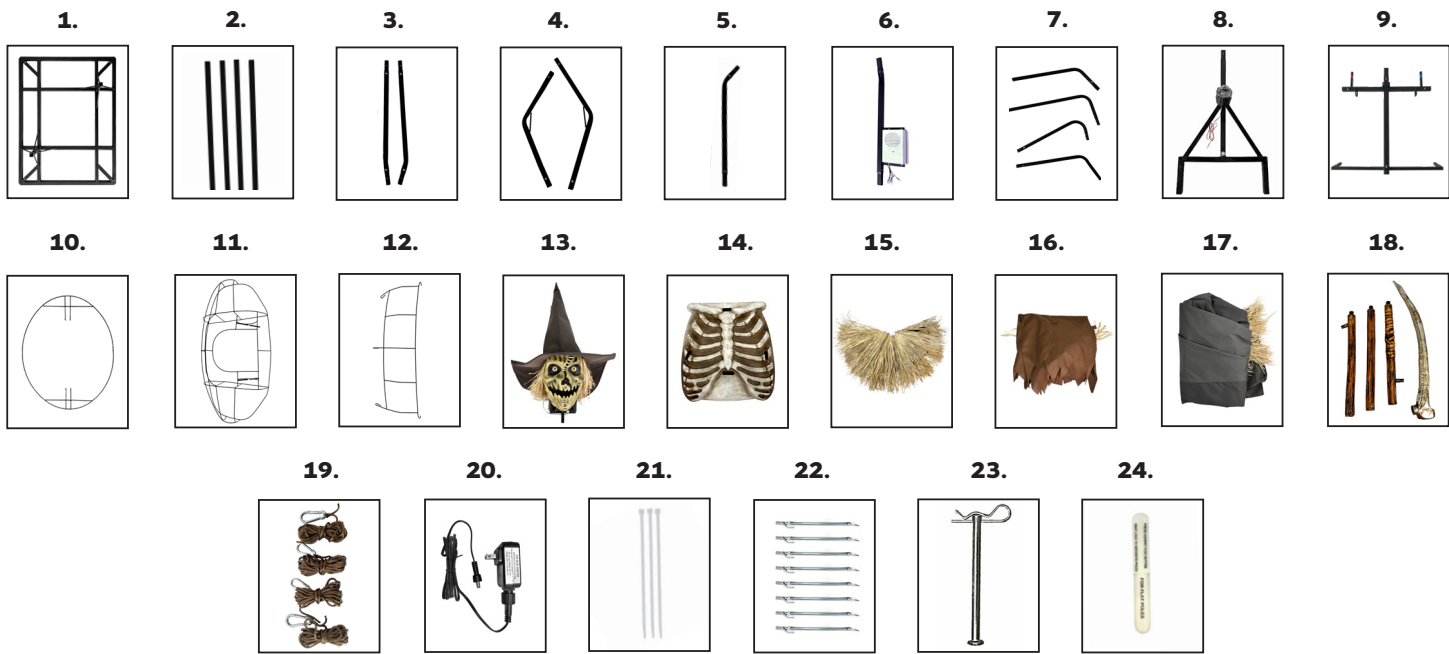

- | | | |
|---------------------------------------|-------------------------|---------------------------------------|
| 1. METAL BASE | 9. SPINE FRAME | 17. PANTS |
| 2. METAL BASE SUPPORTS (x4) | 10. WAIST RING | 18. SCYTHE POLES & BLADE (x4) |
| 3. LOWER LEFT & RIGHT LEG POLES (x2) | 11. WIRE SHOULDER FRAME | 19. TETHER LINE & CARABINERS (x4) |
| 4. MIDDLE LEFT & RIGHT LEG POLES (x2) | 12. WIRE BACK FRAME | 20. 5.9V 2A DC ADAPTER |
| 5. UPPER RIGHT LEG POLE | 13. HEAD | 21. WIRE SHOULDER FRAME ZIP TIES (x3) |
| 6. UPPER LEFT LEG POLE & CONTROL BOX | 14. RIB CAGE | 22. GROUND STAKES (x8) |
| 7. LEFT & RIGHT ARM POLES (4) | 15. STRAW COLLAR | 23. CLEVIS & COTTER PIN |
| 8. WAIST FRAME & LED | 16. SHIRT | 24. SNAP LOCK REMOVAL TOOL |

ASSEMBLY

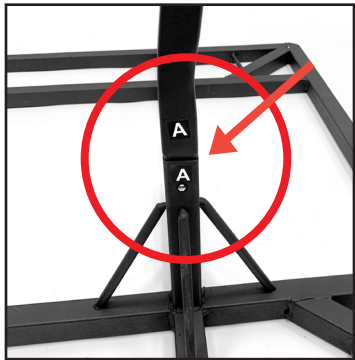


1. Insert and snap lock the LOWER LEFT LEG POLE into the METAL BASE.

(Match A to A)




2. Insert and snap lock the LOWER RIGHT LEG POLE into the METAL BASE.

(Match A1 to A1)

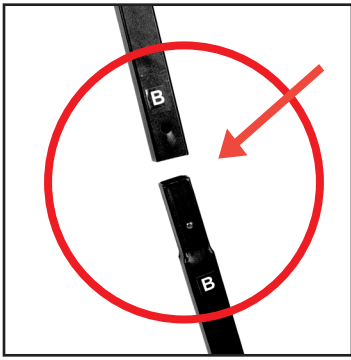

3. Insert and snap lock the MIDDLE LEFT LEG POLE into the LOWER LEFT LEG POLE.

(Match B to B)

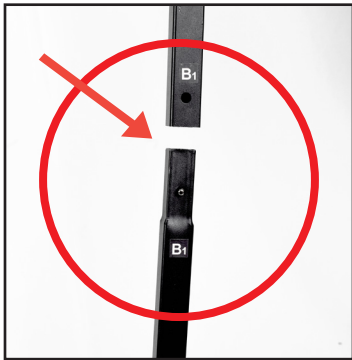

4. Insert and snap lock the RIGHT MIDDLE LEG POLE into the LOWER RIGHT LEG POLE.

(Match B1 to B1)




5. Place the PANTS with the FRONT label facing forward over the assembled METAL BASE and MIDDLE LEG POLES.



6. Insert and snap lock the UPPER LEFT LEG POLE & CONTROL BOX into the MIDDLE LEFT LEG POLE.

(Match C to C)

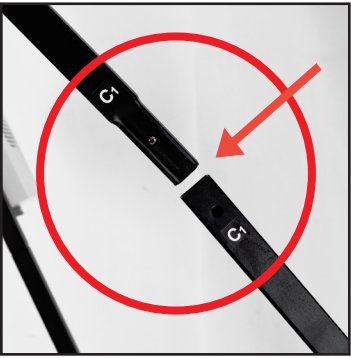

7. Insert and snap lock the UPPER RIGHT LEG POLE into the MIDDLE RIGHT LEG POLE.


(Match C1 to C1)




8. Attach the WAIST FRAME & LED to the UPPER LEG POLES.

(Match D to D)
(Match D1 to D1)


ASSEMBLY

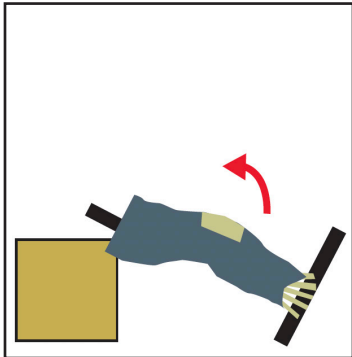

9. Tip the assembled BASE, LEGS, and WAIST FRAME & LED against the shipping box to continue assembly.

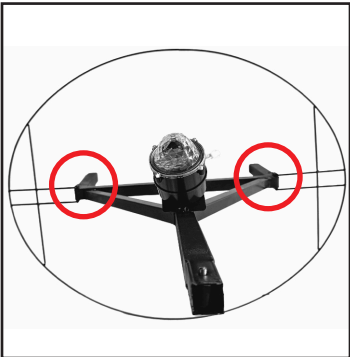


10. Insert the four metal posts on the WAIST RING into the WAIST FRAME & LED.

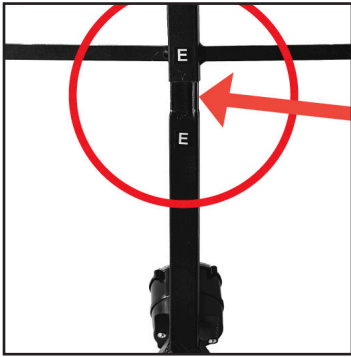


11. Insert and snap lock the SPINE FRAME into the WAIST FRAME & LED.
(Match E to E)



12. Insert and snap lock all three poles of the RIB CAGE to the SPINE FRAME.
(Match F to F)
(Match G to G)
(Match H to H)

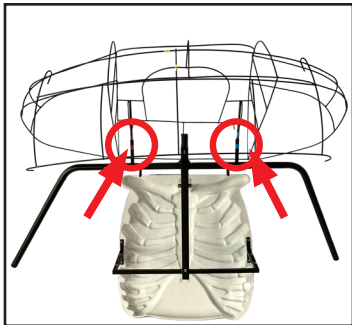


13. Insert the WIRE SHOULDER FRAME'S two metal posts into the SPINE FRAME.
(Match Red to Red)
(Match Blue to Blue)

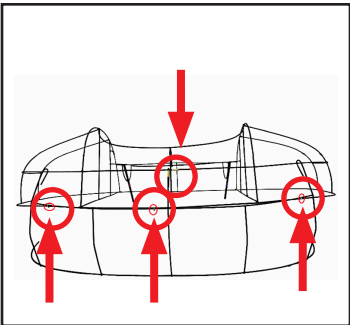

14. Hook the WIRE BACK FRAME to the WIRE SHOULDER FRAME.
(Match Yellow to Yellow)


Secure with three supplied ZIP TIES as shown in the diagram.

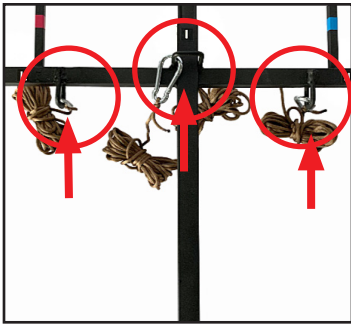

15. Attach the four TETHER LINES & CARABINERS to the SPINE FRAME.




16. Slide the SHIRT over the assembled WIRE SHOULDER FRAME and RIB CAGE.

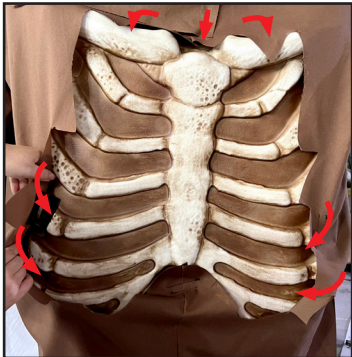


17. Hook and loop the SHIRT to the top, bottom and sides of the RIB CAGE as shown in the diagram.




18. Insert and snap lock the HEAD to the SPINE FRAME.
(Match I to I)

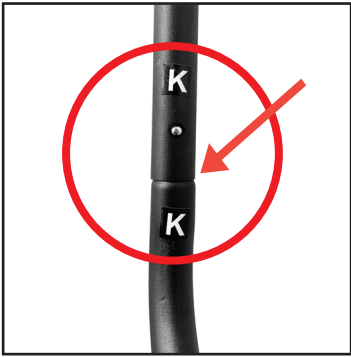

19. Insert and snap lock the LOWER RIGHT ARM POLE to UPPER RIGHT ARM POLE.
(Match K to K)

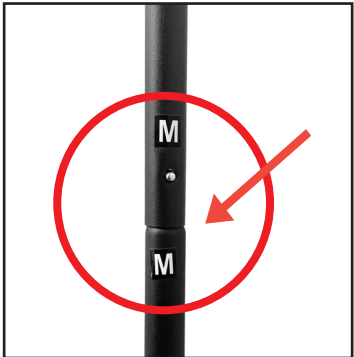

20. Insert and snap lock LOWER LEFT ARM POLE to UPPER LEFT ARM POLE.
(Match M to M)

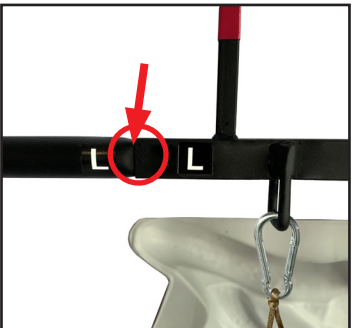


21. Slide the assembled LEFT ARM up the sleeve. Insert and snap lock the assembled LEFT ARM to the SPINE FRAME.
(Match L to L)



22. Slide the assembled RIGHT ARM up the sleeve. Insert and snap lock the assembled RIGHT ARM to the SPINE FRAME.
(Match J to J)




23. Wrap the STRAW COLLAR around the neck and below the HEAD. Hook and loop the back of the STRAW COLLAR shut.

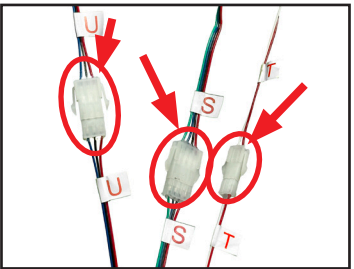


24. Connect the PANTS wire to the CONTROL BOX (Match T to T - Human Sensor). Connect the WAIST FRAME & LED wire to the CONTROL BOX (Match U to U - RIB CAGE LED). Connect the HEAD wire to the CONTROL BOX (Match S to S - Head & Jaw Motions; LED Eyes).


ASSEMBLY

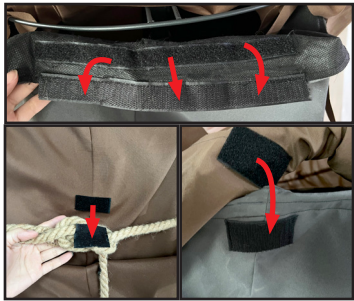


25. Pull the PANTS up and hook and loop the PANTS to the WAIST RING. Hook and loop the SHIRT to the PANTS. Hook and loop the back of the rope knot to the SHIRT.

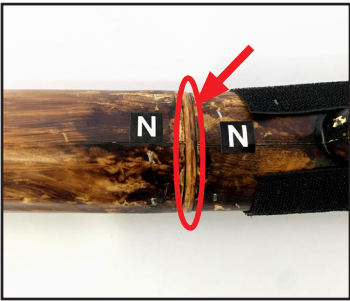

26. Connect the LOWER SCYTHE POLE to the MIDDLE SCYTHE POLE. Twist to lock.
(Match N to N)

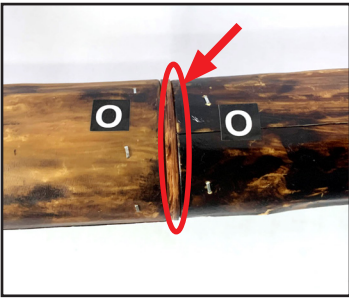

27. Connect the MIDDLE SCYTHE POLE to the UPPER SCYTHE POLE. Twist to lock.
(Match O to O)

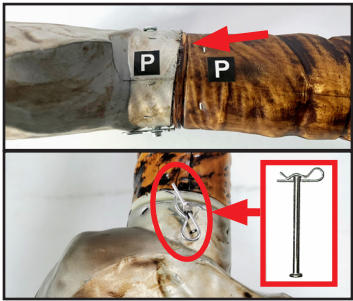


28. Connect the BLADE to the UPPER SCYTHE POLE (match P to P). Secure the SCYTHE BLADE by inserting the CLEVIS PIN through the hole in the BLADE. Slide the COTTER PIN through the hole in the CLEVIS PIN to complete the BLADE assembly.



29. Insert and snap lock the assembled SCYTHE POLE to the assembled LEFT ARM. (Match Q to Q) Hook and loop the straw sleeve to the assembled SCYTHE POLE.




30. Insert and snap lock the assembled SCYTHE POLE to the ASSEMBLED RIGHT ARM. (Match R to R) Hook and loop the straw sleeve to the SCYTHE POLE.

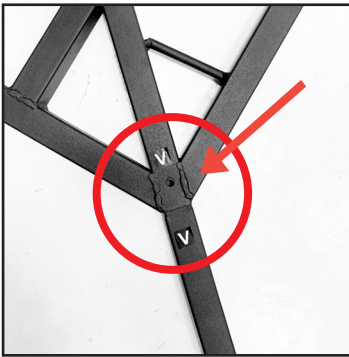

31. Recommended 2 people stand the item upright. Insert all four METAL BASE SUPPORTS into the METAL BASE.
(Match V to V x4)




32. Insert and twist the 5.9V 2A DC ADAPTER tightly into the CONTROL BOX. (do not overtighten) Access the CONTROL BOX through flap located on the back of the left PANT leg.

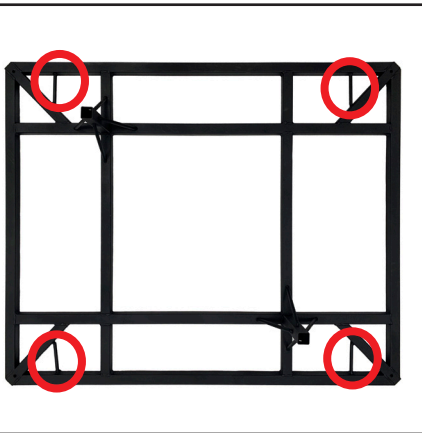

33. Pull the four TETHER LINES out and secure them with four GROUND STAKES by inserting them into the ground. Finish the GROUND STAKE setup by securing the METAL BASE. Insert the remaining GROUND STAKES into all four corners of the METAL BASE as shown.

OPERATING INSTRUCTIONS

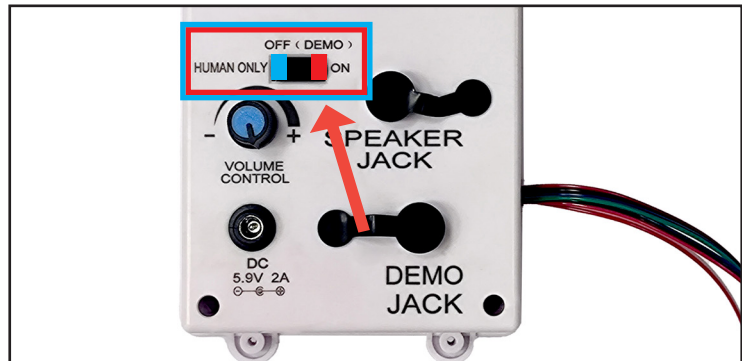

1. Move the switch to the "ON" position (marked in red). Move in front of the item or make a loud sound (clap) to activate the item.
OR
Move the switch to the "HUMAN ONLY" position (marked in blue) to activate the item with motion only.
Turn the item to the "OFF (DEMO)" position when not in use.


OPTIONAL DEMO AND EXTERNAL SPEAKER SETUP

OPTIONAL FOOTPAD SETUP

FOOTPAD IS NOT INCLUDED. MUST BE PURCHASED SEPARATELY.

- 1. Insert the cable from optional footpad into the jack labeled "DEMO JACK" located on the CONTROL BOX.
- 2. Place the power switch to the "OFF(DEMO)" position to enable demo activation.
- 3. Step on the footpad to activate the scary sequence!


* Footpads are sold separately and can be purchased at www.tekkyaccessories.com.

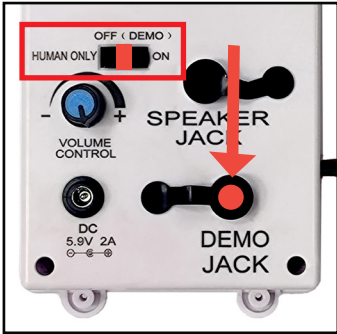

OPTIONAL EXTERNAL SPEAKER SETUP

EXTERNAL SPEAKER IS NOT INCLUDED. MUST BE PURCHASED SEPARATELY.

- 1. Plug speaker cord into the jack labeled "SPEAKER JACK" located on the CONTROL BOX.
- 2. Turn the "VOLUME CONTROL" knob on the CONTROL BOX to highest level and use your external speaker's volume control to adjust volume level.

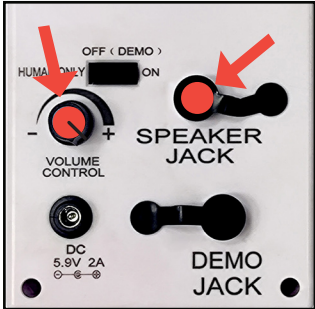

Warning! This item is not a toy. For decoration only. Small parts, choking hazard.
This product is intended for use by persons 15 years of age and older.
Not intended for use by children ages 14 years and younger.

WARNING!
DO NOT TURN ITEM ON UNTIL YOU HAVE COMPLETELY FINISHED ASSEMBLY.
STAY CLEAR OF ITEM WHILE OPERATING.
DO NOT PLACE ITEM ON UNEVEN GROUND.
DO NOT PLACE WEIGHT ON ITEM WHILE IN OPERATION UNLESS ON METAL BASE.



Visit us at tekkydesign.com
Requires 5.9V 2A DC
Adapter (included)

ALL NEW MATERIAL ONLY:
METAL, PLASTIC, FABRIC,
POLYPROPYLENE FOAM,
POLYESTER WADDING.
Surface washable only.

12-FT Scarecrow™
is a trademark of Tekky.
Copyright ©2023 Tekky.
All Rights Reserved.
FUN97132

MADE IN CHINA



DO NOT RETURN THIS ITEM TO THE STORE!
If experiencing technical difficulties, please go to
www.tekkydesign.com for assistance.



SMART PHONE SCAN
SETUP VIDEO

