

EASY ASSEMBLY AND OPERATION INSTRUCTIONS

FUN97219 Crouching Clown (Red)



Please follow the step by step guide and enjoy your Crouching Clown (Red)!

Please read all instructions carefully before assembling. Save this instruction sheet for future reference.

CARE AND STORAGE INSTRUCTIONS

For best performance operate your item indoors. When not in use, store this product in its original packing. Keep away from heat and moisture.

⚠ WARNING

This item is not a toy and should be used for decoration only. This item contains small parts that can be a choking hazard. Keep all plastic and wire parts away from children.

1. Please use the adapter supplied by manufacturer.
2. Please assemble item according to instructions. Connect all wires according to matching color.
3. Children should be supervised by adults. Item should not be grabbed, as it becomes a tipping hazard.
4. Keep all away from the adapter, as it heats up during operation.

PARTS LIST

- A. Body with Torso Frame x 1
- B. Cotter Pins x 8
- C. Base x 1
- D. Shoes x 2
- E. Shoulder Support x 1
- F. Head x 1
- G. Collar x 1
- H. Adapter x 1


Input: 100 - 240V AC 50/60Hz

Output: 5.9V 2.0A




BEFORE ASSEMBLING, REMOVE ALL THE ABOVE PARTS FROM BOX. IF ANY PART IS MISSING, DO NOT ATTEMPT TO ASSEMBLE THE PRODUCT AND CONTACT CUSTOMER SERVICE AT CUSTOMERSERVICE@SVICHINA.COM

Assembly Instructions:

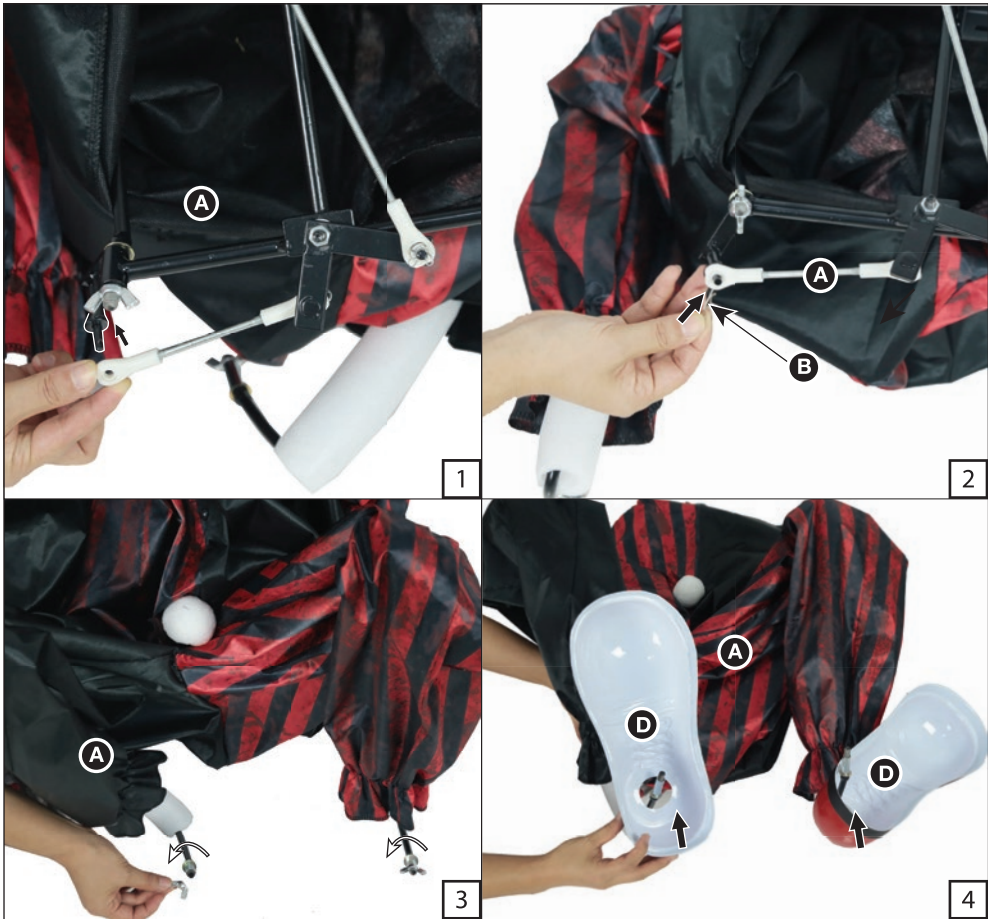

STEP1

Attach the Connecting Rod available on the (A) Body with Torso Frame to the peg which is also available on the (A) Body with Torso Frame as shown in Figure 1.
Insert the (B) Cotter Pin into the hole located on the lower portion of the available peg on the (A) Body with Torso Frame and then bend the (B) Cotter Pin to fasten the Connecting Rod in place as shown in Figure 2.
Rotate the wing nuts counterclockwise which are located on the bottom of the (A) Body with Torso Frame until they come off as shown in Figure 3.
Slide the (D) Shoes up the legs of the (A) Body with Torso Frame as shown in Figure 4.

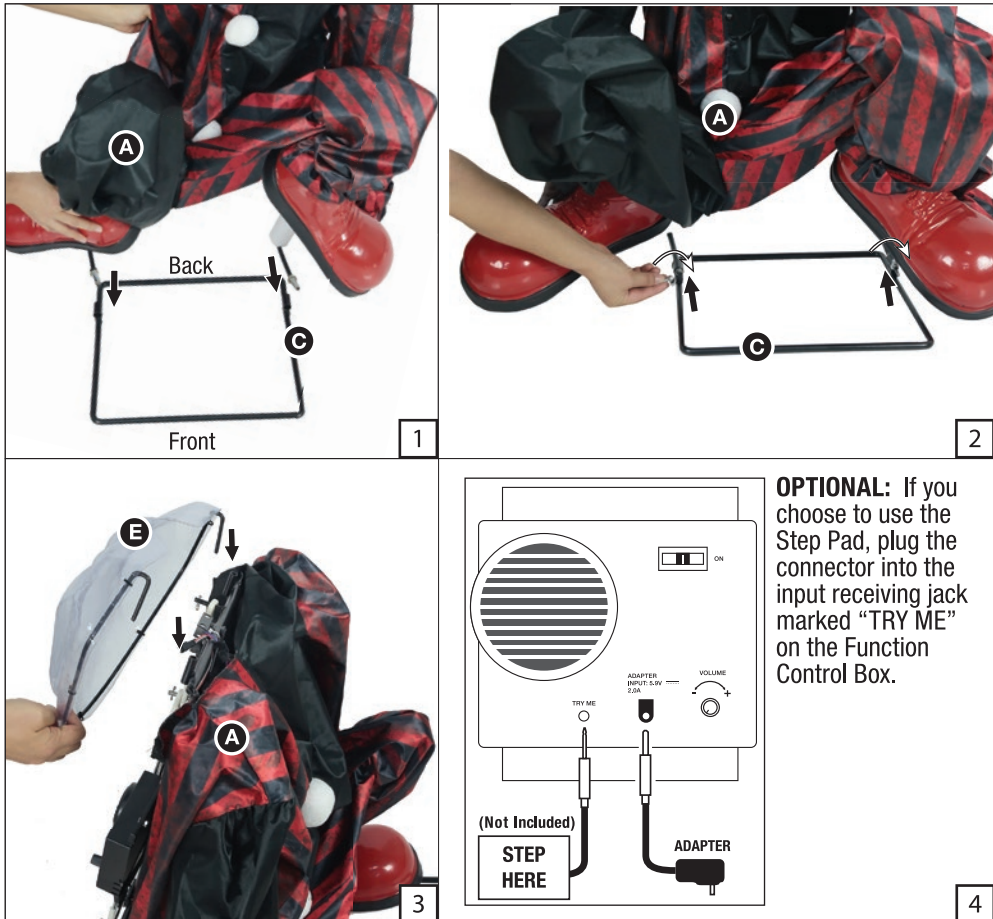

STEP2

Insert the (A) Body with Torso Frame into the housings on the (C) Base as shown in Figure 1. Rotate the wing nuts clockwise until tightened as shown in Figure 2.
Attach the (E) Shoulder Support to the (A) Body with Torso Frame by sliding the pegs available on the (E) Shoulder Support into the housings on the top of the (A) Body with Torso Frame as shown in Figure 3.
Now, plug the Adapter into the input receiving jack marked "DC 5.9V" on the Function Control Box.



STEP3
Set the (F) Head onto the (A) Body with Torso Frame by sliding the forked hook into the “neck” slot housing on the (A) Body with Torso Frame as shown in Figure 1.
Connect the cable from the (F) Head to the corresponding cable from the Function Control Box located on the (A) Body with Torso Frame as shown in Figure 2.
Secure the back of the (A) Body with Torso Frame with the hook & loop closures as shown in Figure 3.
Attach the (G) Collar to the (F) Head and secure with the hook & loop closures as shown in Figure 4.

STEP4
Secure the back of the (G) Collar with the hook & loop closures as shown in Figure 1.
Slide the peg available on the right arm of the (A) Body with Torso Frame into the housing available on the right thigh of the (A) Body with Torso Frame as shown in Figure 2.
Insert the (B) Cotter Pin into the hole located on the right leg of the available peg on the (A) Body with Torso Frame and then bend the (B) Cotter Pin to fasten in place as shown in Figure 3.
Slide the peg available on the left arm of the (A) Body with Torso Frame into the housing available on the left thigh of the (A) Body with Torso Frame as shown in Figure 4.
Insert the (B) Cotter Pin into the hole located on the left leg of the available peg on the (A) Body with Torso Frame and then bend the (B) Cotter Pin to fasten in place as shown in Figure 5.
Your Crouching Clown is now fully assembled. Plug in and turn on to let the fun begin!

OPERATION INSTRUCTIONS:

1. Plug the power adapter into a standard power outlet and adjust the settings on the Function Control Box, located on the Body with Torso Frame, as desired.
2. Settings:

Sensor	This switch mode will activate lights, sound and animation when the Infra-red (IR) sensor is activated and will operate for one activity cycle with each activation. The Infra-red (IR) sensor has a range of up to 2 m/6.5 ft. and will activate when someone comes within an 80-degree angle from left-to-right, as well as from above and below.
○	OFF/Try Me - This switch mode allows the item to be activated only if triggered by using a Step Here Try Me Activation Pad (Not Included). The item will operate for one activity cycle with each Try Me activation.
I	ON - This switch mode will continually operate the lights, sound and animation of the item.
⌚	VOLUME - Raise or lower the volume using the volume control turn dial, turn all the way down to turn the volume off.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

CAUTION: Changes or modifications not expressly approved by the party responsible for compliance could void the user’s authority to operate the equipment.
NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures: Reorient or relocate the receiving antenna, Increase the separation between the equipment and receiver, Connect the equipment into an outlet on a circuit different from that to which the receiver is connected. Consult the dealer or experienced radio/TV technician for help.
Seasonal Visions International, Berkeley, CA 94710, CUSTOMERSERVICE@SVICHINA.COM

IMPORTANT SAFETY INSTRUCTIONS -SAVE THESE INSTRUCTIONS

DANGER! TO REDUCE THE RISK OF FIRE OR ELECTRIC SHOCK READ AND FOLLOW ALL SAFETY INSTRUCTIONS:

Read and follow all instructions that are on the product or provided with the product. For a cord-connected or direct plug-in power unit, do not use an extension cord. Reference the National Electrical Code, NFPA 70, specifically for the installation of wiring and clearances from power and lighting conductors. Installation work and electrical wiring must be done by qualified person(s) in accordance with all applicable codes and standards, including fire-rated construction. For a cord-connected or direct plug-in power unit, do not install or use within 10 feet of a pool.

WARNING: Risk of electric shock. When used outdoors, install only to a covered Class A GFCI protected receptacle that is weatherproof with the power unit connected to the receptacle. If one is not provided, contact qualified electrician for proper installation. Ensure that the power unit and cord do not interfere with completely closing the receptacle cover.

WARNING: Risk of Fire. Installation involves special wiring methods to run wiring through a building structure. Consult qualified electrician.

